











## CONTENTS

Computer Software Copyrights . . . . .	6	Menu Exit/Button . . . . .	15
<b>Safety . . . . .</b>	<b>7</b>	Menu Buttons . . . . .	15
Product Safety and RF Exposure		Display . . . . .	16
Compliance . . . . .	7	Microphone Jack . . . . .	17
<b>Introduction . . . . .</b>	<b>9</b>	Optional DTMF Microphone (RMN4026) . . . . .	17
Trunked Radio Systems . . . . .	9	DTMF Microphone Keypad . . . . .	18
PassPort® Trunked Systems . . . . .	9	Programmable Buttons . . . . .	20
LTR® Trunked Systems . . . . .	9	Audio Indicators for Programmable	
Conventional Radio Systems . . . . .	10	Buttons . . . . .	25
CDM1550•LS+ Radio Features . . . . .	10	<b>Getting Started . . . . .</b>	<b>27</b>
Radio Wide Features . . . . .	10	Turning the Radio On or Off . . . . .	27
PassPort Zone Features . . . . .	10	Adjusting the Volume . . . . .	27
LTR Zone Features . . . . .	11	Selecting a Trunked Zone	
Conventional Zone Features . . . . .	12	and Talkgroup . . . . .	28
<b>Radio Overview . . . . .</b>	<b>13</b>	Sending a Trunked Call . . . . .	28
Parts of the Radio . . . . .	13	To Send a Trunked Call . . . . .	28
CDM1550•LS+ Models . . . . .	13	Selecting a Conventional Zone and	
On/Off/Volume Control Knob . . . . .	14	Channel . . . . .	29
LED Indicators . . . . .	14	Direct Zone Access . . . . .	29
Push-to-Talk (PTT) Button . . . . .	15	Direct Channel Access . . . . .	29
Microphone . . . . .	15	Sending a Conventional Call . . . . .	31
Menu/Select Button . . . . .	15	Receiving a Trunked or Conventional	
		Call . . . . .	31
		Repeater or Talkaround  →  Mode	
		Call Light . . . . .	33
		Home Channel Revert . . . . .	33

Horn and Lights . . . . .	33	Selective Call . . . . .	45
To Activate Horn and Lights		Sending a Selective Call using the	
Programmed with Call Light . . . . .	33	Preprogrammed Button . . . . .	45
To Activate Horn and Lights		Sending a Selective Call through	
Programmed with Call Alert. . . . .	34	the Menu. . . . .	45
<b>PassPort Trunking . . . . .</b>	<b>35</b>	Sending a Selective Call using the One-	
Seamless Roaming. . . . .	35	Touch Button. . . . .	47
Initial Registration . . . . .	35	Receiving a Selective Call  . . . . .	48
Roaming and Registering		Call Alert. . . . .	49
Between Sites. . . . .	36	Sending a Call Alert using the	
Site/Min View . . . . .	37	Preprogrammed Button . . . . .	49
PTT ID Alias . . . . .	38	Sending a Call Alert through the Menu	49
Roam Request . . . . .	38	Sending a Call Alert using the	
To Start a Roam Request . . . . .	38	One-Touch Button. . . . .	51
To Cancel a Roam Request . . . . .	40	Receiving a Call Alert  . . . . .	52
Home Site Revert . . . . .	40	<b>Radio Calls . . . . .</b>	<b>53</b>
Roam Lock . . . . .	41	Making a Selective Call . . . . .	53
To Activate Roam Lock . . . . .	41	Receiving a Selective Call  . . . . .	54
To Deactivate Roam Lock . . . . .	41	Sending a Call Alert Page . . . . .	55
PassPort Primary Talkgroup. . . . .	42	Receiving a Call Alert Page  . . . . .	57
Site / Talkgroup Restriction. . . . .	42	Radio Check. . . . .	57
Site Restriction . . . . .	42	Sending a Status . . . . .	58
Group Restriction. . . . .	43	Sending a Message . . . . .	59
Troubleshooting . . . . .	44	Receiving a Message. . . . .	60
<b>PassPort Signaling. . . . .</b>	<b>45</b>	Responding to Emergency Alerts  . . . . .	60
		Decoding an Emergency Alarm . . . . .	61

Multiple Queued Emergencies . . . . .	62	Operation through the Menu . . . . .	71
Three Minute Timer . . . . .	62	Auto Group Scan	
After the Timer Expires . . . . .	62	(LTR Trunked Operation Only) . . . . .	71
Clearing an Emergency Alert  . . . . .	62	To Start Auto Group Scan . . . . .	71
Sending an Emergency Remote Monitor . . . . .	63	To Stop Auto Group Scan . . . . .	72
Sending an Emergency Alert  . . . . .	63	All Group Scan . . . . .	72
Remote Monitor . . . . .	64	To Start or Stop All Group Scan Operation	
To Activate Remote Monitor . . . . .	64	through a Preprogrammed Button . . . . .	72
To Receive a Remote Monitor . . . . .	64	To Start or Stop All Group Scan	
Selective Radio Inhibit . . . . .	65	Operation through the Menu . . . . .	72
Editing a Radio Call List  . . . . .	65	System Scan  . . . . .	73
Name and Call Tone Tagging . . . . .	66	When System Scan is Enabled . . . . .	73
To Tag a Specific User's Name . . . . .	66	To Start or Stop a System Scan	
To Tag a Type of Radio Call . . . . .	67	Operation . . . . .	73
<b>Scan . . . . .</b>	<b>69</b>	Deleting a Nuisance Channel/Talkgroup	
Talkback . . . . .	69	(PassPort Group Scan or System	
PassPort Primary Auto Group Scan		Scan Operation Only) . . . . .	74
(PassPort Trunked Operation Only) . . . . .	70	To Temporarily Delete the	
PassPort Group Scan  . . . . .		Channel/Talkgroup . . . . .	74
(PassPort Trunked Operation Only) . . . . .	70	Restoring a Channel/Talkgroup	
When PassPort Group Scan is		Back to the Scan List . . . . .	74
Enabled . . . . .	70	Editing a Scan List . . . . .	74
To Start or Stop PassPort Group		View a Scan List . . . . .	75
Scan Operation through a		Adding or Deleting Talkgroups	
Preprogrammed Button . . . . .	71	or Channels in a Scan List . . . . .	75
To Start or Stop PassPort Group Scan			

Prioritizing a Talkgroup or Channel in a Scan List. . . . .	76	the Menu . . . . .	90
<b>Phone. . . . .</b>	<b>79</b>	Recorded Message Playback . . . . .	91
Making a Phone Call <b>①</b> Through a Trunked System . . . . .	79	To Playback a Message using the Preprogrammed Record/Playback Button . . . . .	91
Making a Phone Call <b>①</b> Through a Conventional System . . . . .	80	To Playback a Message using the Menu . . . . .	92
Receiving a Phone Call <b>①</b> Through a Trunked or Conventional System . . . . .	82	Recorded Message Delete. . . . .	92
Modifying the Phone List <b>□</b> . . . . .	83	To Delete a Message using the Preprogrammed Delete Playback Button. . . . .	92
To Add an Entry. . . . .	83	To Delete a Message using the Menu	93
To Delete an Entry. . . . .	84	Recorded Message Transmission. . . . .	93
To Edit an Entry. . . . .	85	Answer Mode . . . . .	94
<b>Voice Storage . . . . .</b>	<b>87</b>	To Enable the Answer Mode Feature .	94
Incoming Call Recording. . . . .	88	To Record a Message. . . . .	94
Selective Incoming Call Recording . . .	88	To Disable the Answer Mode Feature	95
To Selectively Record an Incoming Call. . . . .	88	<b>Audio/Tone Settings . . . . .</b>	<b>97</b>
All Incoming Call Recording . . . . .	88	<b>Utilities . . . . .</b>	<b>99</b>
To Record All Incoming Calls . . . . .	89	Setting the Power Level <b>LH</b> . . . . .	101
Voice Memo Recording . . . . .	90	Setting the Clock/Alarm . . . . .	102
To Record a Voice Memo using the Preprogrammed Record/Playback Button . . . . .	90	Displaying the Time . . . . .	103
To Record a Voice Memo using		Selecting the Display Language. . . . .	103
		<b>Warranty . . . . .</b>	<b>105</b>
		Limited Warranty . . . . .	105

<b>Accessories</b> .....	<b>109</b>
Microphones .....	109
Handsfree Kits.....	109
Exchangeable Button Kits.....	109
Mounting Kits .....	109
Remote Mounts.....	110
External Speakers.....	110
Installation and Alarm Kits.....	110
Antennas.....	110
Service Aids and Programming	
Equipment .....	111
Control Station Kits .....	111
Mobile Data Units Section.....	112
Terminals: .....	112
Radio Interface Cables .....	112
Peripherals.....	112
Global Positioning System (GPS)	
Antennas.....	112
Software.....	113
Miscellaneous .....	113
Public Address .....	113
Retrofit Kit .....	113

## COMPUTER SOFTWARE COPYRIGHTS

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs, including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

Notes:

## SAFETY

### PRODUCT SAFETY AND RF EXPOSURE COMPLIANCE



Caution

Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.

#### ATTENTION!

**This radio is restricted to occupational use only to satisfy FCC RF energy exposure requirements.** Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet enclosed with your radio (Motorola Publication part number 68P81095C99) to ensure compliance with RF energy exposure limits.

For a list of Motorola-approved antennas, batteries, and other accessories, visit the following web site which lists approved accessories: <http://www.motorola.com/cgiss/index.shtml>.

## Notes



## INTRODUCTION

Welcome to Motorola's CDM Series family of radio users. This user guide supports CDM1550•LS+™ radios. These radios combine the very latest in two-way technology while delivering outstanding functionality at the touch of a button.

The CDM1550•LS+ mobile radio operates on UHF/VHF PassPort and LTR trunked and conventional radio systems.

Please check with your Motorola dealer for features available in your radio.

### TRUNKED RADIO SYSTEMS

Trunked systems allow a large number of users to share a relatively small number of frequencies or repeaters without interfering with each other. The airtime of all the repeaters in a trunked system is pooled, which maximizes the amount of airtime available to any one radio and minimizes channel congestion.

### PassPort® Trunked Systems

PassPort is an enhanced trunking protocol developed by Trident Micro Systems that supports wide area dispatch networking. A network is formed by linking several trunked sites together to form a single system. This offers users an extended communication coverage area. Additionally, users with PassPort can seamlessly roam among all sites within the network. Seamless roaming means that the radio user does not have to manually change the zones on the radio when roaming from site-to-site.

### LTR® Trunked Systems

LTR is a transmission based trunking protocol developed by the E. F. Johnson Company for primarily single site trunking applications. In transmission trunking, a repeater is used for only the duration of a single transmission. Once a transmission is completed, that repeater becomes available to other users. This means that a conversation comprised of many transmissions may occur over several different channels within the LTR system. This method of trunking provides system efficiency

by making repeaters available to all users after every transmission.

## CONVENTIONAL RADIO SYSTEMS

Conventional radio systems typically refers to unit-to-unit communications through a single channel. Conventional systems also allow radio users to extend communication coverage by relaying their messages through a repeater. To ensure coordinated use by multiple talkgroups, each radio user must monitor the channel or repeater before transmitting to verify that the system is not currently busy.

## CDM1550•LS+ RADIO FEATURES

**Note:** Throughout this manual there are features listed as trunked and conventional. **Trunked** indicates the feature functions in both PassPort and LTR zones unless otherwise noted. **Conventional** indicates the feature functions in Conventional zones only.

Radio Feature Highlights:

### Radio Wide Features

- 14-Character Alphanumeric Display
- 4 Programmable Feature Buttons
- Up to 15 PassPort and/or LTR Zones with up to 16 Talkgroups per Zone
- Up to 16 or 160 Conventional Channels (depending on model capability)
- X-Pand™ Audio Enhancement
- Home Channel Revert
- Telephone Interconnect
- User-programmable Phone and Scan Lists
- Voice Storage Capability

### PassPort Zone Features

- Unique Mobile Identification Number (MIN) per Radio
- Unique Electronic Serial Number (ESN) per Radio
- Registration/Deregistration upon power up/power down
- Automatic Seamless Roaming between Networked Sites
- Site/Talkgroup Restriction
- Optional Primary Talkgroup
- Primary Talkgroup Transmit Inhibit
- Registered Site and Mobile Identity View
- User Initiated Roam Request

## PassPort Zone Features (Cont.)

- Primary Auto Group Scan and PassPort Group Scan
- Roam (Site) Lock
- Push-To-Talk (PTT) ID Aliasing
- NTIA Band Support (403-420 MHz) including 9 MHz Rx/Tx Separation in both 25 KHz and 12.5 KHz channel spacing.\*
- Call Signalling Features
  - PTT ID Alias (if pre-programmed) or MIN (Display of Mobile Identification Number or Alias if preprogrammed in the radio.)
  - Selective Call
  - Call Alert

## LTR Zone Features

- MDC-1200 Signaling\*\*
  - Call Alert
  - Selective Call
  - Status\*
  - Remote Monitor
  - Selective Radio Inhibit
  - Radio Check
  - Caller ID
  - Message\*
  - Radio Call List
  - Name/Call Tone Tagging
- Auto Group System, All Group Scan
- System Scan with 2 Priority Levels

\* Only supported in UHF Band I (403-470 MHz) CDM1550•LS+ Radios.

\*\*Not available in all models. Please check with your dealer for feature availability.


## Conventional Zone Features

- MDC-1200 Signaling\*
  - Call Alert
  - Selective Call
  - Status
  - Emergency Alert
  - Remote Monitor
  - Selective Radio Inhibit
  - Radio Check
  - Caller ID
  - Message
  - Emergency Remote Monitor
  - Radio Call List
  - Name/Call Tone Tagging
- Monitor and Sticky Permanent Monitor
- System Scan with 2 Priority Levels

# RADIO OVERVIEW

## PARTS OF THE RADIO

CDM1550•LS+ Models

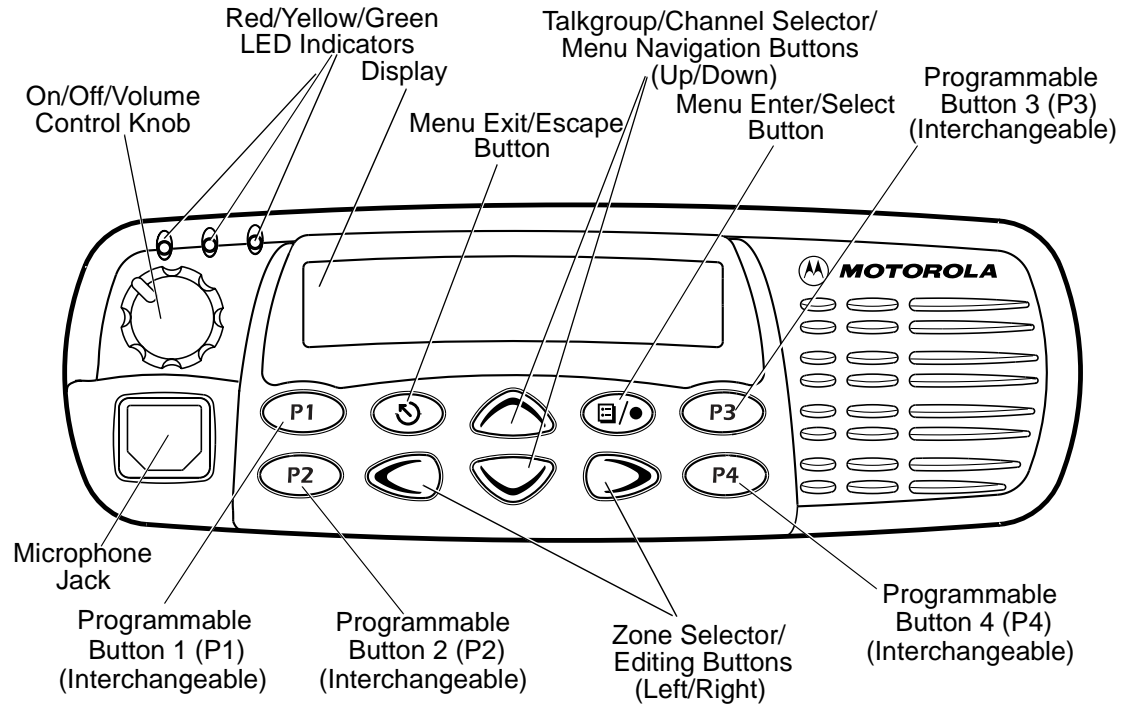

### On/Off/Volume Control Knob



Turns the radio on or off, and adjusts the radio's volume.



### LED Indicators


Indicates power-up, scan, or receipt of a Talkgroup or Selective call (see table below):

LED Color	Indicates
Steady red	Radio is transmitting ( <b>PTT</b> button pressed)
Flashing red	Radio is attempting to access a trunked system ( <b>PTT</b> button pressed), or Radio is receiving ( <b>PTT</b> button released)
Double flashing yellow	Call Light feature, or Individual Selective Call Received
Single flashing yellow	Group Selective Call received (LTR Trunked and Conventional operation only) Individual Selective Call or Call Alert (PassPort operation only)
Momentary green	Radio has powered-up successfully

LED Color	Indicates
Double flashing green	System, All Group Scan, or PassPort Group Scan operation

**Left Button**  and **Right Button** 

- Used to scroll through the preprogrammed Trunked and Conventional zones.
- Used to scroll through menu choices when in Menu mode.
- When editing Call, Scan, and Phone lists,  is used as a backspace key and  is used to add a space.

**Up Button**  and **Down Button** 

- Used to scroll through the preprogrammed talkgroups of a selected trunked zone, or through conventional channels when in conventional zone.
- Used to scroll through menu choices when in Menu mode.

**Push-to-Talk (PTT) Button**

Press and hold down this button to talk; release it to listen.

**Microphone**

When sending a message, hold the microphone 1 to 2 inches (2.5 to 5 cm) away from your mouth, and speak clearly into the microphone.

**Menu/Select Button** 


Used to enter Menu mode. When in Menu mode, this button is used to make menu selections.

**Menu Exit/Button** 

Used to move to the previous menu level (short press) or to exit Menu mode (long press).

**Menu Buttons****Exit****Left****Up****Down****Menu/  
Select****Right**

## Display










The top display row displays menu and radio status information:

Symbol	Indication
 <b>X-Pand</b>	The X-Pand feature is activated. When in narrow band, this feature improves audio quality.
 <b>Power Level</b>	Low Power “L” or High Power “H” is activated.
 <b>Monitor</b>	The selected channel is being monitored (Conventional operation only).
 <b>Phone</b>	Phone mode is selected.

Symbol	Indication
 <b>Call Received (LTR/Conv.)</b> Or <b>Incoming Call/ Page (PassPort Selective Call/ Call Alert)</b>	A Selective Call or Call Alert has been received (LTR trunked and Conventional operation only).  A Selective Call or Call Alert has been transmitted or received. Flashing icon indicates call attempt in progress, while a solid icon indicates that the call has been established (PassPort operation only).
 <b>Emergency</b>	An Emergency Siren is being sounded or an Emergency Alarm is being sent.
 <b>Scan</b>	When the green LED is blinking, it indicates that the System, PassPort Scan, or All Group Scan feature has been activated.  When the green LED is off, it indicates that non-prioritized Auto Group Scan has been activated.



Symbol	Indication
 <b>•Priority 1 Scan</b> <b>( ● flashing)</b>	Indicates activity on a Priority 1 talkgroup or channel during System Scan.
 <b>Priority 2 Scan</b> <b>( ● steady)</b>	<ul style="list-style-type: none"> <li>• When the green LED is on, it indicates activity on a priority 2 talkgroup or channel during System Scan.</li> <li>• When the green LED is off, it indicates prioritized Auto Group Scan has been activated.</li> </ul>
 <b>Talkaround</b>	You are not transmitting through a repeater (Conventional operation only).
 <b>Programming Mode</b>	A Program list is being edited.
 <b>Clock</b>	Shows the time (12- or 24-hour).

Symbol	Indication
 <b>Signal Strength</b>	The more bars, the stronger the signal being received by your radio.
 <b>PassPort Zone</b>	A PassPort zone has been selected.


### Microphone Jack

Plug the optional DTMF Microphone (RMN4026) or other microphone into this jack.


### OPTIONAL DTMF MICROPHONE (RMN4026)

Your radio may be ordered with an optional DTMF (Dual-Tone Multi-Frequency) microphone that has a direct-entry keypad. This microphone has three buttons (A, B, C) below the keypad that can be programmed by

your dealer to conveniently activate available radio features.

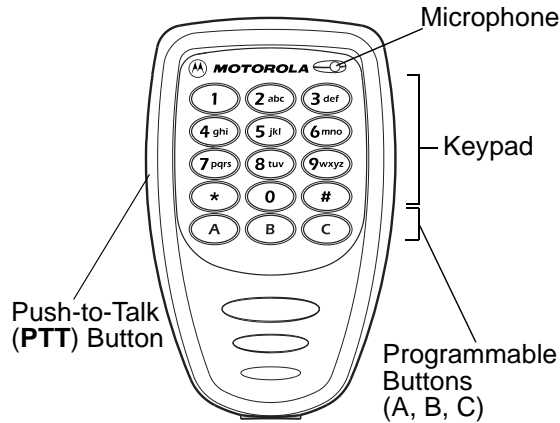

## DTMF Microphone Keypad

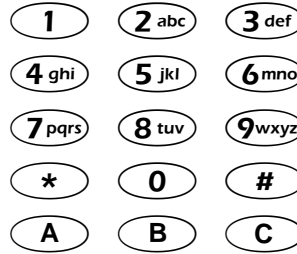

The keypad is used for:

- Dialing a phone number.
- Entering a specific radio ID number when making an MDC radio call or PassPort Selective Call or Call Alert.
- Entering information when programming radio call, scan, and phone lists.
- Directly accessing preprogrammed features (**A**, **B**, and **C** buttons [see page 20]).

Each key can generate several different characters. For example, to enter the character “C,” press the **2 abc** button three times. (Refer to the following table on page 19.)

## Entering Characters Using the DTMF Microphone Keypad

Button	Number of Times Button is Pressed														
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
0	0	(	)	<	>										
1	1	&	%	#	*										
2 abc	A	B	C	2	a	b	c	2	Á	Ç	à	á	ç		
3 def	D	E	F	3	d	e	f	3	È	É	Ê	è	é	ê	
4 ghi	G	H	I	4	g	h	i	4	Í	ì	í				
5 jkl	J	K	L	5	j	k	l	5							
6 mno	M	N	O	6	m	n	o	6	Ñ	Ó	Ô	ò	ó	ô	ö
7 pqrs	P	Q	R	S	7	p	q	r	s	7					
8 tuv	T	U	V	8	t	u	v	8	Ú	ù	ú				
9 wxyz	W	X	Y	Z	9	w	x	y	z	9	Y	y			
*	*	/	+	-	=										
#	#	Blank Space	-	.	!	?	'	”	,	;	:				

## PROGRAMMABLE BUTTONS

Your radio has several programmable buttons that can be programmed by your dealer as shortcuts to various radios' features.

Programmable buttons include:

- The four front buttons (P1, P2, P3, and P4).
- The three buttons (A, B, and C) of the optional DTMF microphone.

Some buttons can access up to two features, depending on the type of button press:

- **Short Press**—quickly pressing and releasing the programmable buttons,  
*or*
- **Long Press**—pressing and holding the programmable buttons,  
*or*
- **Hold Down**—pressing and holding down the programmable buttons while checking status or making adjustments.

The table on page 21 summarizes the programmable features available and shows the page number where the feature is explained.

In the “Button” column, have your dealer record the name of the programmable button next to the feature that has been programmed to them.

Use the abbreviations for instance P1, P2, P3, and P4 shown in the radio illustrations at the front of this manual.

Also, where a choice exists, have your dealer indicate whether the button press is short press (SP), or long press (LP).

Check with your dealer for a complete list of features your radio supports.

Feature	Indicator	Short Press	Long Press	Hold Down	Page	Button
Auxiliary Control (1/2)	—	Activates or deactivates a pin on the accessory connector.†		—	—	
Backlight Control	—	Turn on your radio backlight.†		—	—	
Direct Channel Access	—	Direct access to a trunked talkgroup or conventional channel through a Smart Microphone.†		—	29	
Direct Zone Access	—	Direct entry to zone selection menu.†		—	29	
Edit Scan List	—	Add, delete, or prioritize talkgroups or channels.			74	
Emergency§	⚠	Initiate Emergency Alert.	Cancel Emergency Alert.	—	63	
Home Channel	—	Directly access your favorite trunked zone and talkgroup or conventional channel.†		—	33	
Horn and Lights	—	Toggles external alarm feature or cancels a triggered alarm.†		—	33	
Message‡§	—	Direct entry to the message menu.†		—	59	
Monitor §	📡	Enter/Exit permanent monitor mode.	Open Squelch.	Continually monitor channel.	—	
Phone	📞	Directly access Phone mode.†		—	79	

† This feature is activated by **EITHER** a short **OR** a long press, but not both.

§ Conventional operation only. ‡LTR trunked operation only. \*PassPort trunked operation only.

Feature	Indicator	Short Press	Long Press	Hold Down	Page	Button
Power Level	LH	Toggle transmit power level between high and low.†		—	101	
Radio Call ‡§	LED Color	Directly access radio call menu.†		—	53	
Member Call ‡§	—	Directly access one of the first 3 members of your Radio Call List.		—	53, 55	
Speed Call ‡§	—	Display last entry called. †		—	53, 55	
Repeater/Talkaround §	→	Toggle between using a conventional repeater or transmitting directly to another radio.†		—	32	
Roam Request *	Searching	Manually initiate PassPort roaming function.	Stop PassPort roaming function.	—	37	
Scan/Delete Nuisance Channel	↻	Turn PassPort Group, All Group, and System scan on or off.	Delete a nuisance channel while scanning.	—	74	

† This feature is activated by **EITHER** a short **OR** a long press, but not both.

§ Conventional operation only. ‡ LTR trunked operation only. \*PassPort trunked operation only.

Feature	Indicator	Short Press	Long Press	Hold Down	Page	Button
Site/MIN View*	—	Displays the PassPort site number on which the unit is registered, the home site and unit's MIN (Mobile Identification Number).†		—	37	
Speed Dial	—	Quickly access speed dial phone list.†		—	79	
Status‡§	—	Direct entry to the message menu.†		—	58	
Voice Storage Record/ Playback	—	Playback recorded messages.	Record voice memos.	—	90	
Voice Storage Playback Exit	—	Exit Voice Storage Play Back mode.†		—	91	
Voice Storage Playback Delete	—	Delete recorded messages.†		—	92	
Volume Set	—	—	—	Sound a tone for adjusting your radio's volume level.	27	
Home Site Revert*	Searching	Turn Home Site Revert on.†		—	40	
Roam Lock*	—	Turn Roam Lock on or off.†		—	41	
Selective Call* (Preprogrammed Button)	LED Color	Send a Selective Call.†		—	45	

† This feature is activated by **EITHER** a short **OR** a long press, but not both.

§ Conventional operation only. ‡ LTR trunked operation only. \*PassPort trunked operation only.

Feature	Indicator	Short Press	Long Press	Hold Down	Page	Button
Selective Call* (One-Touch Button)	—	Directly access the Radio Call List.†		—	47	
Call Alert* (Preprogrammed Button)	LED Color	Send a Call Alert.†		—	49	
Call Alert* (One-Touch Button)	—	Directly access the Radio Call List†		—	51	

† This feature is activated by **EITHER** a short **OR** a long press, but not both.

§ Conventional operation only. ‡ LTR trunked operation only. \*PassPort trunked operation only.



## Audio Indicators for Programmable Buttons



High-Low Tone



Low-High Tone


In addition to having visual indicators, some programmable buttons use tones to indicate one of two modes:

Button	High-Low Tone	Low-High Tone
Scan	<b>Stop</b> scan	<b>Start</b> scan
Power Level	<b>High</b> power selected	<b>Low</b> power selected
Repeater/ Talkaround	<b>Uses</b> conventional repeater	<b>Does not use</b> conventional repeater

**Notes:**

## GETTING STARTED

### TURNING THE RADIO ON OR OFF

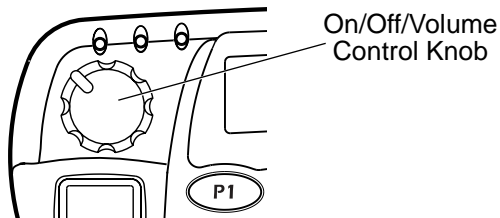

**ON**

Push the **On/Off/Volume Control** knob. If power-up is successful, you hear the Self-Test Pass Tone



and see the green LED momentarily turn on.

If the radio fails to power up, you hear the Self-Test Fail

Tone 

**OFF**

Push the **On/Off/Volume Control** knob until you hear a click and the display clears.

### ADJUSTING THE VOLUME

Turn the **On/Off/Volume Control** knob clockwise to increase the volume, or counterclockwise to decrease the volume.





–or–


- 1 Hold down the **Volume Set** button (see page 23). You hear a continuous tone.
- 2 Turn the **On/Off/Volume Control** knob to the desired volume level.
- 3 Release the **Volume Set** button.

## SELECTING A TRUNKED ZONE AND TALKGROUP

Up to 15 PassPort and/or LTR trunked zones (containing 16 talkgroups each) can be programmed into your radio.

### To select a trunked zone and talkgroup:

- 1  or  to select the appropriate trunked zone.
- 2  or  until you see the desired preprogrammed talkgroup on the display.

**Note:**  (the PassPort Zone symbol) appears when a PassPort Zone has been selected.

---

## SENDING A TRUNKED CALL

### To Send a Trunked Call

- 1 Hold the microphone in a vertical position at a distance of about 1 to 2 inches (2.5 to 5 cm) from your mouth.
- 2 Press and hold the **PTT** button.  
–or–  
Press and release the **PTT** button and wait 3 seconds.
  - If access to the trunked system was successful, the red LED indicator lights steady.  
  
In addition, your dealer can program your radio to sound a short, high-pitched (talk permit) tone, indicating successful trunked system access.
  - If access to the trunked system was unsuccessful, the red LED indicator flashes and a low-pitched (talk prohibit) tone sounds, indicating that the system was busy or out-of-range.





- 3 With the **PTT** button depressed, speak clearly into the microphone
- 4 Release the **PTT** button to listen.

You will see the Alias (if preprogrammed) or MIN of the calling radio on your radio's display.

## SELECTING A CONVENTIONAL ZONE AND CHANNEL

Up to a total of 16 conventional channels, in one or more conventional zones, can be programmed into your radio.




### To Select a Conventional Zone and Channel

- 1  or  to select the appropriate conventional zone.
- 2  or  until you see the desired conventional channel on the display.

## DIRECT ZONE ACCESS

The Direct Zone Access feature offers an alternative way of accessing a trunked or conventional zone.

### To Activate Direct Zone Access

- 1 Press the preprogrammed **Direct Zone Access** button (see page 21).
- 2  or  until you see the desired zone on the display.
- 3  to confirm your selection.

## DIRECT CHANNEL ACCESS

The **direct channel access** feature allows you to directly access a specific trunked talkgroup or conventional channel within the zone you have currently selected. This feature can be programmed on one of the radio programmable buttons (P1, P2, P3, or P4) and/or any DTMF microphone (RMN4026) programmable buttons (A, B, or C).

## To Start Activate Direct Channel Access

### Using the radio's programmable buttons:

- 1 Press the preprogrammed Direct Channel button.  
The current talkgroup or channel flashes intermittently.

YR TKGP ALIAS

- 2 Up or down arrow  or  to select the appropriate Trunked talkgroup or channel.

- 3 Press again the preprogrammed Direct Channel button.

–or–

Press  or .

The new selected talkgroup or channel appears on the display.



NW TKGP ALIAS

### Using the DTMF microphone:

- 1 Press the preprogrammed Direct Channel button (A, B, or C).

The current talkgroup or channel flashes intermittently.

YR TKGP ALIAS

- 2 Up or down arrow  or  to select the appropriate Trunked talkgroup or channel.  
–or–

If **Menu/Channel Up** feature is preprogrammed on the DTMF microphone press it to select the appropriate talkgroup or channel.

- 3 Press again the preprogrammed Direct Channel button.

–or–

Press **select/enter** button on the microphone (if preprogrammed).

The new selected talkgroup or channel appears on the display.

NW TKGP ALIAS





## SENDING A CONVENTIONAL CALL

**Note:** In the United States, FCC regulations require you to monitor the conventional channels before sending a call. The monitor feature (see page 21) can be accessed through one of your programmable buttons.

### To send a conventional call:

- 1 Hold the microphone in a vertical position at a distance of about 1 to 2 inches (2.5 to 5 cm) from your mouth.
- 2 Press the **PTT** button and speak clearly into the microphone. The red LED indicator lights steady while the call is being sent.
- 3 Release the **PTT** button to listen.

## RECEIVING A TRUNKED OR CONVENTIONAL CALL

- 1 Turn your radio on.
- 2 Adjust your radio's volume (see page 27).
- 3  or  to select the desired trunked or conventional zone, then  or  until you see the desired preprogrammed talk-group or conventional channel on the display.
  - Make sure the **PTT** button is released.
- 4 Listen for voice activity. The red LED indicator flashes when your radio is receiving.

**Note:** The Mobile Identification Number (XXXX) or Alias (if preprogrammed) of the calling radio appears on the display if Caller ID is enabled.

XXXX

## REPEATER OR TALKAROUND |→| MODE

### (CONVENTIONAL OPERATION ONLY)

Talkaround Mode enables you to communicate with another radio when either:

- The repeater is not operating.

–or–

- Your radio is out of the repeater's range but within communicating distance of another radio.

**Note:** The |→| symbol appears on the LCD screen when Talkaround Mode is selected.


### To Select either Repeater Mode or Talkaround Mode

Press the preprogrammed **Repeater/Talkaround** button (see page 22) to toggle between Repeater Mode and Talkaround Mode.

–or–

1  to enter Menu Mode.


2  or  until Rptr/Talkarnd

3  to select Rptr/Talkarnd

4  or  until Talkarnd Mode

–or–

Talkarnd Mode

5  to confirm your selection.



## CALL LIGHT

### (TRUNKED OPERATION ONLY)

The **Call Light** indicator informs you that you have received a call from a specified talkgroup (as programmed by your dealer). The yellow LED indicator flashes continuously, indicating that a call has been received.

To Turn the Call Light Off, do one of the following:

- Turn the radio off, then on again.
- Select another trunked or conventional zone.
- Press the **PTT** button.
- Press any preprogrammed button.

## HOME CHANNEL REVERT

The Home Channel Revert feature allows you to instantly access your favorite trunked talkgroup or channel at the touch of a button.

### To Activate Home Channel

Press the preprogrammed **Home Channel Revert** button (see page 21).

## HORN AND LIGHTS

When you are away from your vehicle, the **Horn and Lights** feature notifies you when a call is received by activating your vehicle's horn and lights. This feature can be triggered by a Call Alert in all modes of operation. It can also be associated with Call Light in LTR trunked and PassPort mode.

### To Activate Horn and Lights Programmed with Call Light (Trunked Operation Only)

- 1 Press the preprogrammed **Horn and Lights** button. The LED flashes yellow continuously, indicating that a call has been received.

you see



- 2 Once the delay timer has expired, the horn and lights of the vehicle go off.
- 3 Press any buttons on the radio or the DTMF microphone to deactivate it.

## To Activate Horn and Lights Programmed with Call Alert

- 1 Press the preprogrammed **Horn and Lights** button. When you receive a call alert, you can see the preprogrammed name or ID of the calling radio:

NAME OR ID

**Note:** If preprogrammed, alert tones (either once or continuously) may sound.

- 2 Press any buttons on the radio or the DTMF microphone to deactivate it.

**Note:** There are options available in the CPS (Customer Programming Software), which don't require you to manually activate **Horn and Lights**. Please see your dealer for additional information.

---

## PASSPORT TRUNKING

PassPort® is an enhanced, wide-area trunking protocol developed by Trident Micro Systems. Up to 128 trunked sites can be linked together to form one PassPort system, which means that your communications can extend far beyond the reach of a single trunked site.

### SEAMLESS ROAMING

PassPort Trunking systems offer you the ability to seamlessly roam among all sites in a network. Seamless Roaming means that you do not have to manually change the zones on your radio when roaming from site-to-site. As you roam throughout a PassPort System's coverage area, your CDM1550•LS+ radio is regularly monitoring the RSSI (Received Signal Strength Indication) level of the site on which you are currently registered. In addition, if the signal strength falls below the acceptable threshold pre-programmed by your dealer, your radio starts monitoring the RSSI level of adjacent sites within the network. This allows the CDM1550•LS+ radio to quickly roam to the site with the strongest signal, which provides

you with optimal audio quality throughout your communications.

### Initial Registration

Before communications with your talkgroup can begin, your CDM1550•LS+ radio needs to register on the PassPort system. Registration automatically takes place upon radio power up or after selecting the desired PassPort zone by pressing unless your radio is Site Restricted from that site or Group Restricted from that talkgroup. What you see:

- 1 Upon radio Power up, you see:  
(if you select a PassPort zone after the radio has powered up, see step 2).

PASSPORT

- 2 The selected **PassPort Zone Alias** (if preprogrammed) appears on the display.

ZONE ALIAS

- 3 The selected **Talkgroup Alias** (if preprogrammed) appears on the display.

TLKGRP ALIAS

**Note:** If the radio performs a more extensive frequency search in order to attempt successful registration, you may see on the display:

SEARCHING

- 4 Upon successful PassPort Registration, you see:

REG SITE XXX

**Note:** Your radio sounds a “Low-High” tone upon successful PassPort System registration. The XXX number indicates the site within the PassPort system on which you have registered.

- 5 After successfully registering to a site, the selected PassPort talkgroup Alias (if preprogrammed) appears and remains on the display.

TLKGRP ALIAS

## Roaming and Registering Between Sites

Once initial registration with the PassPort system has occurred, your radio constantly monitors the RSSI to ensure an acceptable signal level is maintained (as programmed by your dealer). When the RSSI in the radio falls below this acceptable level, the radio attempts to roam to and register onto another site within the PassPort system. This process happens automatically and requires no action on your part. What you see:

- 1 When your radio is searching for a new site or attempting successful registration to a site, or if the radio roams to a restricted site, you see on the display:

SEARCHING

**Note:** This message is displayed until successful registration occurs. For more information about site restriction, please contact your local dealer.

- 2 When your radio has successfully registered to a new site in the PassPort System, XXX indicates the site number you see on the display.

REG SITE XXX

**Note:** You will not see this if your radio is Site Restricted from the site it is trying to access.

- 3 The selected PassPort talkgroup Alias (if preprogrammed) appears and remains on the display.

TLKGRP ALIAS

**Note:** If the radio is set to a restricted talkgroup, you see:

GrpRestrict

For more information about Site and Group Restriction, see page 42.

## SITE/MIN VIEW

There may be circumstances when you want to view the number of the PassPort site on which you are registered as well as your Mobile Identification Number (MIN) of your CDM1550•LS+ radio.

### To Start And Stop Viewing Site/MIN

- 1 Press the preprogrammed **SITE/MIN View** button (see page 23).

The display shows the number of the site on which you are currently registered.

site now XXX

**Note:** If the preprogrammed button is activated prior to or during registration, a bad key chirp is sounded and you see on the display:

site now n/a

The display indicates the Home Site ID (HSID) and Mobile Identification Number (MIN).

IAM XXX-YYYY

XXX indicates the HSID, YYYYY indicates the MIN.

**Note:** This message can still be activated even if your radio is not registered.

## PTT ID ALIAS

Your CDM1550•LS+ radio supports the display of the Alias of the calling radio when receiving a group dispatch call in PassPort mode. This Alias corresponds to the MIN of the calling radio in the Radio Call List.

**Note:** Alias will be displayed only if preprogrammed in the radio via the PassPort Customer Programming Software (PPCPS). Otherwise, the MIN is displayed.

## ROAM REQUEST

Because of the RSSI feature, your CDM1550•LS+ radio automatically roams to an affiliated site when the signal from the registered site becomes too weak for quality communication. This RSSI threshold is programmed by your dealer. However, if you believe the signal strength would be better on another site, you may want to manually initiate the roaming process. This feature is called Roam Request.

### To Start a Roam Request

- 1 Press the preprogrammed **Roam Request** button (see page 22).
- 2 When the radio is searching for a new site or attempting registration to a site, you see on the display:

SEARCHING

- 3 When the radio has successfully registered to the new site on the PassPort System, you see on the display:

REG SITE XXX

—or—

A bad key chirp may sound and you see on the display:

Roam Not Avail

This can occur under the following circumstances:

- When registration to a site with a higher RSSI than your current site is unavailable.
- When the preprogrammed button is pressed before the radio has collected its “neighbor list”. A neighbor list” is a list of frequencies from adjoining sites within the PassPort system that are used during the roam process.
- When the radio is programmed for a single site system. (i.e. home site only.)

In these cases, wait a few seconds and try again.

- 4 The selected PassPort talkgroup Alias (if preprogrammed) appears and remains on the display:

TLKGRP ALIAS

## To Cancel a Roam Request

- 1 Press and hold the preprogrammed **Roam Request** button (see page 22) again.

You see:

Cnc1 Roam Req

**Note:** The radio then attempts to return to the previously registered site.

## HOME SITE REVERT

This feature allows you to force your CDM1550•LS+ radio to search for its home site and register on it while the radio is currently registered on an affiliated site.

- 1 Press the preprogrammed **Home Site Revert** button (see page 23).
- 2 When the radio is searching for a new site or attempting registration to a site, you see:

SEARCHING

- 3 When the radio has successfully registered to its PassPort home site, you see:

REG SITE XXX

- The radio sounds a “Low-High” tone upon successful PassPort System registration. The XXX number indicates the site within the PassPort system on which you have registered.

**Note:** If the radio is already registered on its home site and Home Site Revert is initiated, a bad key chirp is sounded.

- 4 After successfully registering on the home site, the selected PassPort talkgroup Alias (if preprogrammed) appears and remains on the display.

TLKGRP ALIAS



**Notes:**

- The radio must currently be registered on an affiliated site.
- If the radio cannot register to its Home Site, for whatever reason, the radio reverts back to its current affiliated site.

---

## ROAM LOCK

Because of the RSSI (Received Signal Strength Indication) feature, the CDM1550•LS+ radio automatically roams to a different site when the signal falls below the RSSI level programmed in your radio by your dealer. In some instances (inside a building or in fringe areas), you may want to prevent your radio from roaming. This is possible by enabling the Roam (Site) Lock function.

**Note:** If you are currently on an affiliated site and wish to lock onto your home site, you need to first press the preprogrammed Home Site Revert button prior to pressing the preprogrammed Roam Lock button.

## To Activate Roam Lock

**1** Press the preprogrammed **Roam Lock** button (see page 23).

**2** You see.

TLKGRP ALIAS

Alternating with:

Roam Locked

at one second intervals.

- A good key chirp is heard.

**Note:** A radio can be roam-locked only when it is registered to a site.

---

## To Deactivate Roam Lock

To deactivate Roam Lock, press the preprogrammable **Roam Lock** button again or turn off your radio or switch zones/talkgroups. Your radio automatically re-registers onto the PassPort system.

**Note:** Once deactivated, the radio follows the roaming criteria programmed in the radio.

## PASSPORT PRIMARY TALKGROUP

This is the first talkgroup preprogrammed in your list. Per definition, it always has the highest-level priority among all other preprogrammed talkgroups, also called secondary talkgroups. As such, any transmission on the primary talkgroup is heard on all other idle talkgroups regardless of where the radio is registered (home or affiliated sites). In addition, a user can respond to a call on the primary talkgroup simply by pressing the **PTT** button within a preprogrammed period of time.

If you prefer to use the primary talkgroup for “announcement” calls, you can disable the transmit function. In addition, if you do not have a need for a primary talkgroup, it is possible to disable the level of priority of this talkgroup in the programming software.

**Note:** Please contact your local dealer for additional information.

## SITE / TALKGROUP RESTRICTION (Access Privileges by MIN)

The CDM1550•LS+ mobile radio offers two “access privilege” features called Site Restriction and Talkgroup Restriction. These features, however, can only be enabled or disabled through the PassPort infrastructure (if the Access Privileges by MIN option is available). These features allow the radio to register and operate normally on the home site and on specific affiliated sites or talkgroups which are not restricted as programmed at the infrastructure level by the system operator.

**Note:** All sites except the Home Site can be site and/or talkgroup restricted.

### Site Restriction

The registration and roaming process is unaffected for "non-restricted" radios. However, when a radio is site-restricted from a certain affiliated site in the system, it is prohibited from registering on that site and immediately tries to register to its home site. If the radio is unable to register on the home site, the radio moves on to the next frequency (in its

neighbor list of sites) and attempts to register there. What you see:

For 3 seconds:

SiteRestrict

then:

Until successful registration to its home site or a non-restricted affiliated site.

Searching

–or–

If the radio does not support this feature or the system does not receive an acknowledgement message from the radio. You see:

Disabled

**Note:** If your radio is disabled, power it down and contact your local dealer.

For additional information about site/talkgroup restriction, please contact your local dealer.

## Group Restriction

The registration and roaming process is unaffected for "non-restricted" radios. However, when a radio is talkgroup-restricted from all unrestricted affiliated sites in the system (except the home site where it is always available), it is not able to register on that talkgroup. In this case, you have to either switch talkgroups within the same site or roam to the home site (via the Home Site Revert feature) or initiate a Roam Request to a different talkgroup on an affiliated site.

You see:

GrpRestrict

If you subsequently initiate a roam request to the home site or to a different talkgroup on an affiliated site, you see:

Searching

## TROUBLESHOOTING

## Notes

While in PassPort zones, there are some specific display messages that indicate you should contact your dealer for assistance.

Message	What it Means
"Invalid Group ID"	Your dealer needs to verify talkgroup programming in your radio or the PassPort system.
"DISABLED"	Your radio requires reactivation on the PassPort system (not applicable to conventional and LTR functionality).
Blank display upon power up.	Your radio needs to be returned to your dealer for reactivation or service.

## PASSPORT SIGNALING

Selective Call and Call Alert are available in the CDM1550•LS+ using the PassPort protocol. As such, no third party can hear the conversation of two users engaged in a Selective Call. Selective Call and Call Alert are mutually exclusive. If one of the users is engaged in a Selective Call or Call Alert while roaming to a different site, the Selective Call or Call Alert will end.

### SELECTIVE CALL

You can initiate a Selective Call to a particular radio in three different ways:


- Using a preprogrammed button.
- Through the menu.
- Using the One-Touch button.

### Sending a Selective Call using the Preprogrammed Button


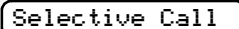
- Press the preprogrammed **Selective Call** button (see page 23). Proceed to Step 4.


–or–


### Sending a Selective Call through the Menu



1  to enter menu mode.

2  or  until 



3  to select 

- The yellow LED indicator lights steady.
- The display shows  and the preprogrammed alias or ID of the last active Selective Call is displayed.

4 If the unit has not been engaged in a Selective Call after power-up, you see: 

 or  to locate the desired alias or ID in the Radio Call List.

–or–

 or  then press the first letter of the desired alias using the DTMF keys to start an alphabetical search. (Full keypad model only.)


–or–


Enter the ID number of the radio you wish to call. (Full keypad model only.)

–or–

Press \* and the DTMF key (0 to 9) (if programmed by your dealer) corresponding to the radio you wish to call.

**Note:** This option does not require you to press the **PTT** button to send the Selective Call.

- 5 Press the **PTT** button to send the Selective Call.
  - While the Selective Call is being established the  blinks and the red LED indicator flashes momentarily.
  - A talk permit tone sounds.

- 6 Once the Selective Call is received and acknowledged by the target radio, the  displays solid.

**Notes:**

- If the Selective Call cannot be established,

you see:

**No Acknowledge**

for 5 seconds. The LED indicator turns off.


- If all channels are busy while attempting a Selective Call,

you see:


**System Busy**

and will hear a delayed busy tone as long as the **PTT** button is pressed.

If the **PTT** button is kept pressed and the system frees up a channel, the radio automatically attempts to re-establish the call.

-  to end the Selective Call and revert to talkgroup dispatch, or press the preprogrammed Selective Call button. You can then manually re-initiate the call. (See Step 1.)

**7** Press the **PTT** button to talk; release to listen.




**8**  to end the Selective Call.

**Note:** If the Selective Call has prematurely ended,

you see: 

and a tone sounds (if preprogrammed by your dealer).

## Sending a Selective Call using the One-Touch Button

- 1** Press and hold the preprogrammed **One-Touch** button.
  - The yellow LED indicator lights steady.
  - The display shows  and the preprogrammed alias or ID is displayed.
- 2** The Selective Call is sent automatically.
- 3**
  - While the Selective Call is being established the  blinks and the red LED indicator flashes momentarily.
  - Once the Selective Call is established the  displays solid.

### Notes:

- If preprogrammed by your dealer, your radio sounds a short high-pitched tone (call established tone) to indicate that you are ready to engage in a conversation.

- If the Selective Call cannot be established,

you see:

No Acknowledge

for 5 seconds. The LED indicator turns off.


- If all channels are busy while attempting a Selective Call,

you see:


System Busy

and will hear a delayed busy tone as long as the **PTT** button is pressed.

If the **PTT** button is kept pressed and the system frees up a channel, the radio automatically attempts to re-establish the call.

-  to end the Selective Call and revert to talkgroup dispatch, or press the preprogrammed Selective Call button. You can then manually re-initiate the call. (See Step 1.)

- 4 Press the **PTT** button to talk; release to listen.

- 5  to end the Selective Call.

**Note:** If the Selective Call has prematurely ended,


you see:

Call Ended

and a tone sounds (if preprogrammed by your dealer).

## Receiving a Selective Call


- 1 When you receive a Selective Call:

- The  blinks and, if preprogrammed by your dealer, the yellow LED indicator lights steady.

You see:

Incoming Call


followed by the preprogrammed alias or ID of the calling radio.

- Once the Selective Call is established the  displays solid.

**Note:** If preprogrammed by your dealer, your radio sounds a short high-pitched tone (call established tone) to indicate that you are ready to engage in a conversation.



2 To answer the Selective Call, press the **PTT** button to talk; release to listen.

3  to end the Selective Call.

**Note:** If the Selective Call has prematurely ended,

you see: 

and a tone sounds (if preprogrammed by your dealer).

## CALL ALERT


You can alert another person by sending a Call Alert to a particular radio in three different ways:

- Using a preprogrammed button.
- Through the menu.
- Using the One-Touch button.


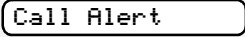
### Sending a Call Alert using the Preprogrammed Button


- Press the preprogrammed **Call Alert** button (see page 24). Proceed to Step 4.


## Sending a Call Alert through the Menu



1  to enter menu mode.

2  or  until 

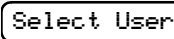

3  to select 

- The yellow LED indicator lights steady.
- The display shows  and the preprogrammed alias or ID of the last active Call Alert is displayed.

4 If the unit has not been engaged in a Call Alert after power-up, you see: 

 or  to locate the desired alias or ID in the Radio Call List.

–or–

 or  then press the first letter of the desired alias using the DTMF keys to start an alphabetical search. (Full keypad model only.)


–or–


Enter the ID number of the radio you wish to page. (Full keypad model only.)

–or–

Press \* and DTMF key (0 to 9) (if programmed by your dealer) corresponding to the radio you wish to page.

**Note:** This option does not require you to press the **PTT** button to send the Call Alert.

- 5 Press the **PTT** button to send the Call Alert.
  - While the Call Alert is being established the  blinks and the red LED indicator flashes momentarily.

- 6 Once the Call Alert is received and acknowledged by the target radio, the  displays solid and you see:

Acknowledge

#### Notes:

- If the Call Alert cannot be established, you see: No Acknowledge

for 5 seconds. The LED indicator turns off.


- If all channels are busy while attempting a Call Alert,

you see:

System Busy

and will hear a delayed busy tone as long as the **PTT** button is pressed.


If the **PTT** button is kept pressed and the system frees up a channel, the radio automatically attempts to re-establish the call.

-  to end the Call Alert and revert to talkgroup dispatch, or press the pre-programmed Call Alert button. You can then manually re-initiate the call. (See Step 1.)

- 7  to end the Call Alert.

## Sending a Call Alert using the One-Touch Button



- 1 Press and hold the preprogrammed **One-touch** button.

- The yellow LED indicator lights steady.
- The display shows  and the preprogrammed Alias or ID is displayed.

- 2 The Call Alert is sent automatically.

- The red LED indicator lights steady.

**Note:** Your radio sounds a continuous tone (if preprogrammed by your dealer).

- 3
  - While the Call Alert is being established the  blinks and the red LED indicator flashes momentarily.
  - Once the Call Alert is established the  displays solid.

**Notes:**

- If preprogrammed by your dealer, your radio sounds a short high-pitched tone (page established tone) to indicate that the page was successful.
- If the Call Alert cannot be established,

you see:

No Acknowledge

for 5 seconds. The LED indicator turns off.


- If all channels are busy while attempting a Call Alert,

you see:

System Busy

and will hear a delayed busy tone as long as the **PTT** button is pressed.


If the **PTT** button is kept pressed and the system frees up a channel, the radio automatically attempts to re-establish the call.

-  to end the Call Alert and revert to talkgroup dispatch, or press the preprogrammed Call Alert button. You can then manually re-initiate the call. (See Step 1.)

- 4  to end the Call Alert.

## Receiving a Call Alert


1 When you receive a Call Alert:

- The  blinks and, if preprogrammed by your dealer, the yellow LED indicator lights steady.

You see:


Incoming Page

followed by the preprogrammed Alias or ID of the calling radio.

- Once the Call Alert is established the  displays solid.

**Note:** If preprogrammed by your dealer, your radio sounds a short high-pitched tone (page established tone) to indicate that the page was successful.

2 To answer the Call Alert, press the **PTT** button to talk; release to listen.

3  to end the Call Alert.

## RADIO CALLS

**Notes:** Available in LTR and Conventional modes only based on model feature set of your CDM1550•LS+ radio. Please check with your dealer.

In LTR Trunked mode, the Radio Call features are available only if the system is available.

### MAKING A SELECTIVE CALL

You can make a selective call to a particular radio or to a group of radios, as programmed by your dealer.

#### To Make a Selective Call

Press the preprogrammed **Radio Call** button (see page 21), and proceed to step 4 on page 54.

–or–

- 1 Press the preprogrammed **Member Call** button corresponding to the member you wish to call.

You see:

Name xxxx

alternating with:

Selective Call

**Note:** For DTMF radio models, if you press any digit on the keypad (#1-9), the display shows the corresponding entry from the Radio Call List.

- 2 Proceed to step 7 on page 54.

–or–

- 1 Press the preprogrammed **Speed Call** button.

You see the Alias (if preprogrammed) or ID of the last called entry.


Name xxxx


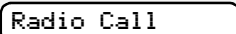
**Note:** For DTMF radio models, if you press any digit on the keypad (#1-9), the display shows the corresponding entry from the Radio Call List.

- 2 Proceed to step 7 on page 54.


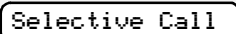
–or–

1  to enter menu mode.

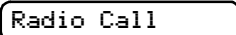

2  or  until 

3  to select 

4  or  until 

5  to select 

- The yellow LED lights steady.

6  or  to locate the desired ID in the Radio Call List.

–or–


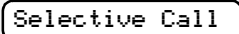
Enter with the DTMF microphone the ID number of the radio you want to call.

7 Press the **PTT** button to send the call.


- The radio sounds a continuous tone, if programmed by your dealer.
- The yellow LED lights steady.

8 Press the **PTT** button and talk; release the **PTT** button to listen.

- The red and yellow LEDs light steady.


9  to return to 

–or–

Hold down  to exit menu mode.

## RECEIVING A SELECTIVE CALL

### When you Receive a Selective Call

- The display shows  and the preprogrammed name or ID of the calling radio.
- The yellow LED flashes, if programmed by your dealer.
- You hear an alert tone.

To answer the call, press the **PTT** button.

- The red LED flashes.

**Note:** Unless you make a Selective Call back to the caller, within the preprogrammed talkback time, your response is heard by all members of your talkgroup.

## SENDING A CALL ALERT PAGE

You can alert another person by sending a Call Alert page.

### To Send a Call Alert Page

Press the preprogrammed Radio Call button (see page 21) and proceed to step 4 on page 55:

–or–

- 1 Press the preprogrammed **Member Call** button corresponding to the member you wish to call.

You see:

Name xxxx

alternating with:

Call Alert

**Note:** For DTMF radio models, if you press any digit on the keypad (#1-9), the display shows the corresponding entry from the Radio Call List.

- 2 Proceed to step 7 on page 56.

–or–

- 1 Press the preprogrammed **Speed Call** button.

You see the Alias (if preprogrammed) or ID of the last called entry.

Name xxxx

**Note:** For DTMF radio models, if you press any digit on the keypad (#1-9), the display shows the corresponding entry from the Radio Call List.

- 2 Proceed to step 7.

–or–

- 1  to enter menu mode.

- 2  or  until


Radio Call



- 3  to select

Radio Call

- 4  or  until

Call Alert

5  to select Call Alert

6  or  to locate the desired ID in the Radio Call List.

–or–

Enter with the DTMF microphone the ID number of the radio you want to page.

7 Press the **PTT** button.

You see:

Call in Prog

and the preprogrammed name or ID alternating on the display.

- The yellow LED lights steady. The red LED flashes every time the radio attempts to transmit the call.


8 If the Call Alert page is received by the target radio, you see:

Acknowledge


If not received,  
you see:

No Acknowledge

- The radio sounds a short alert tone if, programmed by your dealer.

9  to return to Call Alert


–or–

Hold down  to exit menu mode.



## RECEIVING A CALL ALERT PAGE 🎵

### When You Receive a Call Alert Page

- The display shows 🎵  and the preprogrammed name or ID of the calling radio.
- You hear four alert tones, either once or continuously, as programmed by your dealer.
- The yellow LED flashes once for a group call, or flashes twice for an individual call. The red LED flashes once.






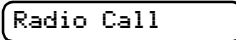








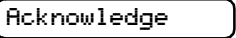

To answer the page, press the **PTT** button; to cancel the page, press any other button.


**Note:** Your radio displays only the last Call Alert page received. Also, your radio does not receive any future Selective Calls until you clear the page.

## RADIO CHECK

Radio Check allows you to determine if a radio is within the range of the trunked system and turned on, without disturbing the user of that radio. This feature can also be used when attempts with Selective Call and Call Alert fail.
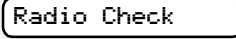
### To Perform a Radio Check

- 1  to enter menu mode.
- 2  or  until .
- 3  to select .
- 4  or  until .
- 5  to select .
- 6  or  to locate the desired ID in the Radio Call list  
 –or–  
 Enter the ID number of the radio you are checking.
- 7 Press the **PTT** button,  
 you see: .
- 8 If the Radio Check is received by the target radio, you see:  
  
 If not received, you see:  


9  to return to

–or–


 Radio Check




Hold down  to exit menu mode.

## SENDING A STATUS



This feature gives you the ability to send a status update to the base. The status feature makes more efficient use of the channel compared to voice transmissions. Status updates of up to 14 characters may be programmed by your dealer.

### To Send a Status

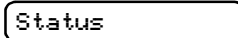1  to enter Menu Mode.

2  or  until  Status

3  to select  Status

4  or  to locate the desired status in the preprogrammed list.

–or–

when using the enhanced keypad microphone only, enter the number of the status you wish to send.

–or–

if programmed by your dealer (see page 23), press the button that has been preprogrammed for a specific status.

**Note:** You cannot retransmit the current status update.

**Notes:** If the radio is not able to send the status or the radio does not receive an acknowledgement if an acknowledgement is expected, you see:

No Acknowledge







If the radio is not able to send the status and no acknowledgement is expected, you see:

No Channel

## SENDING A MESSAGE

This feature gives you the ability to send and receive preprogrammed messages. Data messages make more efficient use of channels compared to voice transmissions. Messages of up to 14 characters may be programmed by your dealer.

### To Send an Electronic (Data) Message

- 1  to enter Menu Mode.
- 2  or  until
- 3  to select
- 4  or  to locate the desired message in the preprogrammed list.  
–or–  
when using the enhanced keypad microphone only, enter the number of the message you wish to send.  
  
–or–  
if programmed by your dealer (see page 21), press the button that has been programmed for a specific message.

**Notes:** If the radio is not able to send the message or the radio does not receive an acknowledgement if an acknowledgement is expected, you see:

No Acknowledge

If the radio is not able to send the message and no acknowledgement is expected, you see:

No Channel

## RECEIVING A MESSAGE

When your radio receives a message:

- You hear two alert tones.
- The yellow LED flashes.
- You see: Msg Received  
alternating with the preprogrammed Alias.

**Note:** If you receive a message that is programmed into your radio, the display alternates with the following:

Message #\_

and

No Alias

## RESPONDING TO EMERGENCY ALERTS (CONVENTIONAL OPERATION ONLY)

Your radio offers choices for initiating and responding to Emergency Alert communications. Choices may include:

- **Emergency Cycles** - Allows the radio to automatically cycle between transmit and receive mode over a preprogrammed number of times by keying with voice after it has received an Acknowledge to the alarm you send. The default number of transmits is one (10, maximum); the default value of the retransmit interval is 5 seconds (one, minimum; 60, maximum).
- **Emergency Alarm/Call** - Gives you access to a voice resource, on a priority basis, over all other types of call traffic.
- **Emergency Remote Monitor** - Enables the dispatcher to activate the transmit circuit of your radio, during an Emergency,

to hear the situation through your microphone. See page 63 for more about sending an Emergency Remote Monitor.


- **Remote Monitor** - Enables the dispatcher to activate the transmit circuit of your radio, during a normal dispatch, to hear the situation through your microphone. See page 64 for information about sending a Remote Monitor.

**Note:** All the choices listed above are dealer preprogrammed. See your dealer for more details.


### Decoding an Emergency Alarm (Conventional Operation Only)

If preprogrammed by your dealer, your radio decodes (responds to) an Emergency Alarm or Emergency Call by:


- Sounding a unique, repeating alert tone
- Activating an external alarm
- Displaying alternating message parts on a single line, similar to the following example:

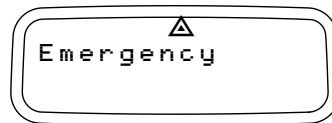


- the word `Emergency`, followed by:

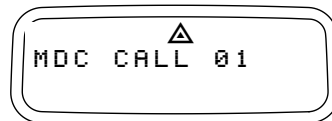

- Emergency Alias (if preprogrammed) from the Radio Call List (example, `MDC CALL 01`), followed by:
- Timestamp of the Emergency Alert (example, `03:55`).

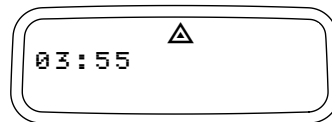

- Flashing the  icon (while decoding only; lights steady when encoding)

### Multiple Queued Emergencies

Clearing the existing displayed Emergency shows the next in the queue, if one exists. The display updates and shows “Emerg (queued number) of (total number)”. If no additional Emergencies are queued, the radio exits Emergency mode and resumes normal mode.

### Three Minute Timer

Responding to an Emergency starts a three-minute timer. The radio does not generate another Emergency Alert tone against that Emergency Alias (if preprogrammed) or ID until the three-minute period expires. If cleared within 3 minutes, the alarm will regenerate the alert.

If the radio receives another Emergency Alert from the same Alias (if preprogrammed) or ID, the radio acknowledges the Emergency but does not restart the tone, activate the external alarm, or display updated information.

### After the Timer Expires

If the three-minute timer has expired for a specific Emergency Alias (if preprogrammed) or

ID, and the radio decodes an Emergency that is currently in queue, the radio:

- Acknowledges the Emergency
- Restarts the Emergency Alert tone
- Activates the external alarm
- Updates the time stamp on the matching Emergency

**Note:** If the Radio Call List does not include an Alias for the radio ID, the ID displays. Radios that do not support the signaling protocol sound the alert tone, activate the external alarm and display data.

## CLEARING AN EMERGENCY ALERT

(CONVENTIONAL OPERATION ONLY)

### To Clear an Emergency Alert


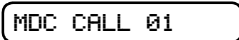
- 1 Press any button on the radio to cancel the Emergency Alert tone.
- 2 Press (or activate) an external push button or foot switch.



**Note:** You must press an external switch to clear the visible Emergency Alias (if preprogrammed) and display the next queued Emergency Alias (if preprogrammed), if present. You must clear all decoded Emergency Alerts before encoding (sending) your own Emergency Alert.

## SENDING AN EMERGENCY REMOTE MONITOR (CONVENTIONAL OPERATION ONLY)

As your radio responds to an Emergency Alert, only the Emergency Queue menu is available.

### To Access the Emergency Queue Menu

- 1  to enter Menu Mode.
- 2 The radio displays the list of aliases currently in the Emergency queue, similar to that shown, oldest to newest. 

- 3  or  to view the next oldest Emergency Remote Monitor packet and to choose the packet to send.


- 4 Press the PTT to send the packet.

## SENDING AN EMERGENCY ALERT (CONVENTIONAL OPERATION ONLY)


A priority Emergency Alert can be sent to a specific radio or dispatch center by pressing:

- A button preprogrammed by your dealer (see page 21)
- The foot switch
- A push button accessory.

**Note:** In conventional mode, emergency alerts have priority over all other calls.

The  symbol appears on the display when your radio is in the Emergency Alert state.

An Emergency Alert can be programmed to:

- Show  and sound a tone
- or–
- Show the normal display

–or–

- Activate the microphone so that all activity can be transmitted (for a predetermined amount of time). See your dealer for more information.




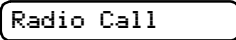





**To activate the Emergency Alert**, press the preprogrammed **Emergency** button.


**To cancel the Emergency Alert**, press and hold the preprogrammed **Emergency** button.

## REMOTE MONITOR

Remote Monitor allows you to automatically key-up another radio to listen-in on all surrounding audio. This feature can be initiated by a dispatcher to a mobile radio, or from a mobile radio to another mobile radio.

### To Activate Remote Monitor

- 1  to enter Menu Mode.
- 2  or  until 
- 3  to select 
- 4  or  until 

- 5  to select the appropriate call list member:



**Note:** An audio or visual indication may come up on the receiving radio if preprogrammed by your dealer.

To cancel **Remote Monitor**, press any button on the radio.

**Note:** Remote monitor automatically ceases after one transmit and one receive cycle.

### To Receive a Remote Monitor

Upon receiving a Remote Monitor Command, the radio:

1. Keys the transmitter
2. Acknowledges the command
3. Sends the PTT-ID
4. Activates the microphone.

**Note:** If a remote microphone is attached, it responds.



Remote Monitor capability depends on which of two modes are preprogrammed:

- **Silent Mode** – When the command is sent in Silent Mode, and the receiving radio keys and transmits for the time set by the Remote Monitor Command, the receiving radio does not generate an indicator of the event.
- **Non-Silent Mode** – When the command is sent in Non-Silent Mode, and the receiving radio keys and transmits for the time set by the Remote Monitor Command, the receiving radio generates an indicator of the event.

The amount of time that the radio remains in receive mode or in transmit mode is set by the Remote Monitor Command and the time settings in the radio. See your dealer for more details.

## SELECTIVE RADIO INHIBIT

Your radio is equipped with a security feature that can temporarily render the unit inoperative when an inhibit signal is sent from a device that supports Selective Inhibit Encode.

This feature is commonly used to disable radios:

- In case of theft
- When your vehicle is being serviced
- For system control reasons

**Note:** When your radio has been disabled by the base station, all controls will be inoperative except for the On/Off button. When the radio is powered up,

You see:
















Radio Disabled

## EDITING A RADIO CALL LIST

Your radio has a Radio Call list that contains the names and radio IDs of several talkgroups or individuals. The ID numbers in the Radio Call List are programmed by your dealer, and cannot be changed from your radio. However, you can edit the names associated with these IDs. The  symbol appears on the display when you are editing.

**Note:** The radio cannot receive any calls while you are editing.

## To Edit a Call List Entry

- 1  to enter menu mode.
- 2  or  until Program Lists
- 3  to select Program Lists
- 4  or  until RadioCall List
- 5  to select RadioCall List
- 6  or  until Edit Entry?
- 7  to select Edit Entry?
- 8  or  until you locate the desired entry.
- 9  to select the entry.
- 10 Use your keypad to edit the entry.
- 11  to save your changes. Entry Saved
- 12  to return to Edit Entry?

—or—

Hold down  to exit menu mode.








## NAME AND CALL TONE TAGGING



You can program your radio to sound a particular alert tone when a specific user is calling (name tone tagging), or when receiving a particular type of radio call (call tone tagging).

**Note:** Name and call tone tagging are valid only for selective calls and call alerts.



There are seven alert tones to select from. (see page 97.)


### To Tag a Specific User's Name

- 1  to enter menu mode.
- 2  or  until Radio Call
- 3  to select Radio Call
- 4  or  until Name Tone Tag
- 5  to select Name Tone Tag


6  or  until you see the name you want to tag.


7  to confirm the selection.


8  or  until you see and hear the tone you want to use for this name.

9  to confirm the selection,


you see:

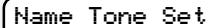


10  to return to

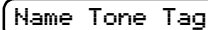


–or–

Hold down  to exit menu mode.

### To Tag a Type of Radio Call



1  to enter menu mode.

2  or  until




3  to select





4  or  until



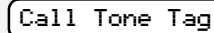

5  to select




6  or  until you see the call type you want to tag.


7  to confirm the selection.


8  or  until you see and hear the tone you want to use for this type of call.

9  to confirm the selection,


you see:

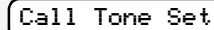

10  to return to

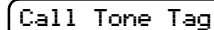

–or–

Hold down  to exit menu mode.

**Note:**

## SCAN

Your radio is equipped with the Scan feature, which allows you to search for, lock onto, and monitor voice activity on trunked talkgroups and conventional channels.

There are up to five types of Scan available in CDM1550•LS+ models. The table below summarizes the Scan types available with each model.

Zone	PassPort Primary Auto Scan	Pass-Port Group Scan	LTR Auto Group Scan	LTR All Group Scan	System Scan
PassPort Trunked	X	X			
LTR Trunked			X	X	X
Conventional					X

**Notes:** The "X" indicates that this type of Scan can be enabled through a programmable button (see page 17) or through your radio menu.

## TALKBACK

When activity is detected during any type of scan, scanning stops and the active talkgroup or channel appears and remains on the display until scanning resumes. Your dealer can program the amount of time you can respond (or "TALKBACK") to the caller before your radio resumes scanning.

You must press the **PTT** button to participate in the call; otherwise, scanning continues to the other talkgroups or channels.

## PASSPORT PRIMARY AUTO GROUP SCAN

(PASSPORT TRUNKED OPERATION ONLY)

PassPort Primary Auto Group Scan automatically scans the primary (first) talkgroup within the selected PassPort zone. Any time you are positioned on a PassPort talkgroup other than the first one, your radio automatically scans activity on the first talkgroup within that zone.


**Note:** This feature is enabled AUTOMATICALLY with your radio. It is not enabled through the radio menu or through a preprogrammed scan button.

## PASSPORT GROUP SCAN

(PASSPORT TRUNKED OPERATION ONLY)

PassPort Group Scan scans talkgroups within the selected PassPort trunked zone, as programmed by your dealer. Up to 16 different talkgroups can be programmed into each Scan list, with one Scan list assigned to each position on the **Zone Selector**. You can edit these Scan lists through your radio's menu (see page 74).

## When PassPort Group Scan is Enabled

- The  symbol appears on the display.
- The LED indicator blinks green during PassPort Group Scan operation; it stops blinking when the radio switches to an active talkgroup or channel.

### Note:


- PassPort Group Scan is not available when registered on an affiliated (non-home) site.
- If you switch to another PassPort zone, LTR, or conventional zone while the radio is scanning, scanning resumes upon return to the PassPort zone where PassPort Group Scan was enabled.
- If the radio is turned off while scanning, the radio resumes scanning when you turn it back on. If the radio registers on a non-home site, scanning is not enabled until the radio registers at its home site.

### To Start or Stop PassPort Group Scan Operation through a Preprogrammed Button (see page 17)


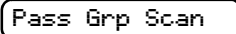
- Press the preprogrammed **Scan** button to start PassPort Group Scan.
- Press the preprogrammed **Scan** button again to stop the PassPort Group Scan.

—or—

### To Start or Stop PassPort Group Scan Operation through the Menu

1  to enter menu mode.

2  or  until 


3  to select 

You see the current scan status.

4  or  until 

—or—



5  to confirm your selection.

## AUTO GROUP SCAN (LTR TRUNKED OPERATION ONLY)



Auto Group Scan automatically scans talkgroups within an LTR zone as programmed by your dealer. Auto Group Scan can be either non-prioritized or prioritized.

- Non-prioritized Auto Group Scan automatically scans all talkgroups programmed with Auto Group Scan.
- Prioritized Auto Group Scan automatically scans the selected talkgroup and all lower 4-numbered talkgroups. For example, if talkgroups 1, 3, and 4 have been programmed by your dealer with Auto Group Scan and talkgroup 4 is selected, the radio automatically scans talkgroups 1, 3, and 4, and skips talkgroup 2.

### To Start Auto Group Scan

Select a talkgroup that has been programmed for Auto Group Scan by your dealer.

**Note:** You do not need to press a preprogrammed **Scan** button.

- The  symbol appears on the display when non-prioritized Auto Group Scan has been activated.
- The  symbol appears on the display when prioritized Auto Group Scan has been activated.
- There is no LED indicator during Auto Group Scan.

### To Stop Auto Group Scan


Select a talkgroup that has not been programmed for Auto Group Scan by your dealer.

## ALL GROUP SCAN

### (LTR TRUNKED OPERATION ONLY)

All Group Scan scans all talkgroups within the selected LTR trunked zone.

When All Group Scan is enabled:

- The  symbol appears on the display.
- The green LED blinks during All Group Scan operation; it stops blinking when the radio switches to an active talkgroup.

**Note:** If you enter menu mode while the radio is scanning, scanning stops. It resumes when you exit menu mode.

### To Start or Stop All Group Scan Operation through a Preprogrammed Button (see page 17)



- Press the preprogrammed All Group Scan button once to start All Group Scan.
- Press the preprogrammed All Group Scan button again to stop All Group Scan.

–or–

### To Start or Stop All Group Scan Operation through the Menu

1  to enter menu mode.


2  or  until 


3  to select 

You see the current scan status.

4  or  until 

–or–

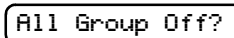

5  to confirm your selection.




## SYSTEM SCAN

(LTR TRUNKED AND CONVENTIONAL OPERATION ONLY)

System Scan scans trunked talkgroups and conventional channels between LTR and conventional zones, as programmed by your dealer. Up to 16 different talkgroups or conventional channels can be programmed into each Scan list. You can edit these lists through your radio's menu (see page 74).

### When System Scan is Enabled

- The  symbol appears on the display.
- The green LED blinks during System Scan operation; it stops blinking when the radio switches to an active talkgroup or channel.

**Note:** If you enter menu mode while the radio is scanning, scanning stops. It resumes when you exit menu mode.

### To Start or Stop a System Scan Operation


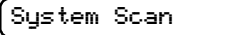
Press the preprogrammed **Scan** button (see page 16) to start or stop scanning,

–or–

Do the following:

1  to enter menu mode.


2  or  until 

3  to select 

You see the current scan status.

4  or  until 

–or– 

5  to confirm your selection.

### Notes:

- In conventional zones only, if there is activity on a non-priority channel, the radio disconnects the user from the current conversation and automatically switches to an active priority channel. This is indicated with a short alert tone.
- Your radio can either revert to a “selected” channel or the “last active” channel depending on its programming. For additional details, contact your local dealer.

## DELETING A NUISANCE CHANNEL/ TALKGROUP

### (PASSPORT GROUP SCAN OR SYSTEM SCAN OPERATION ONLY)

If a talkgroup or channel continually generates unwanted calls (a “nuisance” channel), use the preprogrammed **Scan** button to temporarily delete the talkgroup or channel from the Scan list.

#### To Temporarily Delete the Channel/ Talkgroup

- 1 While the radio’s receiving activity is on the nuisance channel, press and hold the **Scan** button until you hear a high-pitched tone (valid key press).
- 2 Release the **Scan** button. The nuisance channel has been temporarily deleted from your Scan list.  
**Note:** In PassPort mode, you cannot delete a priority channel/talkgroup (see page 76), or the currently selected talkgroup in a Scan list.

## Restoring a Channel/Talkgroup Back to the Scan List

To restore a previously deleted talkgroup or channel back to the Scan list, restart the scan operation or turn your radio off and on again.

**Note:** In PassPort mode, the talkgroup can also be restored by scrolling through the list, or switching the current selected talkgroup or zone


## EDITING A SCAN LIST

### (PASSPORT GROUP SCAN OR SYSTEM SCAN OPERATION ONLY)

One Scan list is assigned to each of the 16 positions on the **Zone Selector**. Each Scan list can contain up to 16 talkgroups and/or channels. The same talkgroup or channel can be included in several Scan lists, and the same Scan list can be assigned to several **Zone Selector** positions.

When you edit a Scan list, you can either add, delete, or prioritize talkgroups or channels.


**Note:** In PassPort mode, talkgroups cannot be prioritized.


Your radio cannot receive any calls while you are editing a Scan list. The  symbol is displayed while you are in edit mode.


**Note:** In Conventional operation only, even if there is activity on a non-priority channel, your radio automatically switches to an active priority channel and indicates the activity with a short tone.

## VIEW A SCAN LIST

To view Talkgroups or Channels in a Scan list:


1  to enter menu mode.


2  or  until

3  to select



4  or  until


**Note:** One Scan list per mode of operation is available.

5  to select

6  or  until

7  to confirm your selection.

8  or  to see the talkgroup or channel is this list.


9 Hold down  to exit menu mode.

## ADDING OR DELETING TALKGROUPS OR CHANNELS IN A SCAN LIST

To add or delete Talkgroups or Channels in a Scan list:


1  to enter menu mode.

2  or  until

3  to select


4  or  until



**Note:** One Scan list per mode of operation is available.

5  to select


6  or  until

or until

7  to confirm your selection.

8  or  until you see the talkgroup or channel you want to add or delete.

**Note:** You cannot delete the Primary talkgroup or your selected talkgroup off a Scan List in PassPort mode.

9  to confirm your selection.

10 If you added a talkgroup or channel,

you see:


–or–

If you delete a talkgroup or channel,

you see:


 to confirm the deletion.

you see:

11  to return to

to return to

–or–

Hold down  to exit menu mode.

## PRIORITIZING A TALKGROUP OR CHANNEL IN A SCAN LIST (SYSTEM SCAN OPERATION ONLY)










You may want to check the activity on one or two talkgroups or channels more frequently than others. You can do this by prioritizing them:




Priority Channel	Scanning Sequence
None specified	Ch1→Ch2→Ch3→ Ch4→...Ch1
Channel 2 (Priority 1)	Ch2→Ch1→Ch2→Ch3→ Ch2→Ch4→Ch2→...Ch1

Priority Channel	Scanning Sequence
Channel 2 (Priority 1) and Channel 8 (Priority 2)	Ch2→Ch1→Ch8→Ch3→ Ch2→Ch4→Ch8→...Ch1






**Note:** In Conventional operation only, even if there is activity on a non-priority channel, your radio automatically switches to an active priority channel and indicates the activity with a short tone.

### Setting Priority Talkgroups or Channels

- 1  to enter menu mode.
- 2  or  until
- 3  to select
- 4  or  until
- 5  to select
- 6  or  until

- 7  to select
- 8  or  until   
or until

You see the current priority talkgroup or channel.

- 9  to select the desired priority level.
- 10  or  until you see the talkgroup or channel you want to prioritize.
- 11  to prioritize that talkgroup or channel.
- 12  to return to   
-or-

Hold down  to exit menu mode.

**Note:** You cannot reprioritize a priority 1 talkgroup or channel to priority 2.

## Notes

## PHONE

Your CDM1550•LS+ radio allows you to place and receive telephone calls through trunked and conventional systems (depending on phone line availability). Telephone calls through a repeater allow only one person to speak at a time.

### MAKING A PHONE CALL THROUGH A TRUNKED SYSTEM

**Note:** The following instructions assume your radio has been programmed as follows by your dealer using CPS (Customer Programming Software).

- Dial type: Live
- Access/Deaccess type: Immediate Auto
- Tone Span: Timed - 100 ms tone duration

#### To Initiate a Phone Call

Do the following:

- 1 Select a trunked zone and talkgroup that have been programmed for telephone.

- 2  to enter menu mode.

–or–



Press the preprogrammed radio or DTMF microphone **Phone** button, and skip to step 5.

–or–

- a. Press and release the **Speed Dial** button to use the speed dial feature.
- b. Press the (1 to 9) key corresponding to the number you want to call on the Phone list. Or press 0 if you want to call the last number dialed.
- c. Press the **PTT** button. A dial tone sounds.
- d. Press the **PTT** button again to send the phone number.

–or–

For LTR trunked systems, press and hold the **PTT** button while dialing a number.

- 3  or  until

Phone

- 4  to confirm

Phone



① appears on the display when you are in Phone mode.


**5** Press and Release the **PTT** button.

- If phone access is successful, a dial tone sounds.
- If phone access is unsuccessful, a low-pitched alternating tone sounds. Disconnect the call (see step 8) and try again.

**6** Enter the phone number with the DTMF microphone. The number is automatically sent without pressing the **PTT** button again.



–or–

 or  to select a number from the phone list.



Press and release the **PTT** button again to send the number.

**7** Hold the radio in a vertical position with the microphone 1 to 2 inches (2.5 to 5 cm) away from your mouth. Press the **PTT** button to talk; release it to listen.

**8** To disconnect the phone call: Press and hold  to exit Phone.  no longer appears on the display.

## MAKING A PHONE CALL THROUGH A CONVENTIONAL SYSTEM

### To Initiate a Phone Call

Press the preprogrammed **Phone** button, and skip to step 5.



–or–

Press the **PTT** button, and if the Hot keypad feature has been programmed by your dealer, do the following:


- 1** Select a conventional zone and channel that have been programmed for telephone.



2  to enter menu mode.

3  or  until

4  to select

 appears on the display when you are in Phone Mode.

5 (For conventional operation with auto access only). You hear a series of tones, indicating that an access code is being sent automatically, and see your access code:

–or–

Enter your access code using the DTMF microphone keypad.

6 When you hear a dial tone:

Enter the phone number using the DTMF microphone keypad.

–or–

 or 


select a number from the phone list.

–or– (see step 7)

- 7
- Press and release the preprogrammed **Speed Dial** button (see step 6) to use the Speed Dial feature.
  - Press the key (1 to 9) corresponding to the number you want to call, or press 0 if you want to call the last number dialed.

**Note:** To redial the last number dialed (if not using Speed Dial), press and release the **PTT** button immediately after the access code is sent. The radio sends the last number dialed.



–or–

If you entered your access code using the keypad, press  once to access the last number dialed; then press and release the **PTT** button.

- 8 Press and release the **PTT** button, if required for your radio.
- 9 Hold the radio in a vertical position with the microphone 1 to 2 inches (2.5 to 5 cm) away from your mouth. Press the **PTT** button to talk; release it to listen.
- 10 To disconnect a phone call, do one of the following:  
Enter the deaccess code using the DTMF microphone keypad.  
—or—  
If your radio has the deaccess code programmed, go to step 9.
- 11 To exit Phone Mode:  
Press and hold **#** to disconnect the call. **☎** disappears from the display.

## RECEIVING A PHONE CALL **☎** THROUGH A TRUNKED OR CONVENTIONAL SYSTEM

### To Receive a Phone Call

- 1  or  to select a LTR talkgroup or conventional channel that has been programmed for telephone.

—or—

Activate any scan type containing a telephone talkgroup or channel (see page 69).

**Note:** No PassPort talkgroup or zone selection is needed in PassPort mode.

- When a phone call is received, a ringing tone sounds, alerting you to answer the phone call.

**Note:** The **☎** also appears on the display in PassPort mode.

2 Press the **PTT** button to answer the phone call. Press the **PTT** button to talk; release it to listen.

3 To disconnect the phone call and exit Phone and menu mode:  
Press and hold to disconnect the call.

**Note:** ① no longer appears on the display in PassPort mode.

## MODIFYING THE PHONE LIST

Your radio contains a Phone list that holds up to 25 phone numbers. The Phone list is shared between trunked and conventional Phone operation. You can modify the Phone list in three ways through your radio's menu:


- Add an entry
- Delete an entry
- Edit an existing entry

The  symbol appears on the display when you are modifying the phone list.


## To Add an Entry

1  to enter menu mode.


2  or  until

3  to select

4  or  until

5  to select

6  or  until



7  to select,


you see:



8 Use the DTMF microphone keypad to enter the name (see page 18 and page 19).


9  to store the name,

you see:

**10** Use the DTMF microphone keypad to enter the phone number. You can also add a dash (press ) and a Pause Indicator (hold down ) until the # character on the display changes to a "P").


**11**  to store the phone number.


**12**  or  until you see the location in the list where you want to store the phone number.


**13**  to store the phone number,

you see:



**14**  to return to



Hold down  to exit menu mode.

### To Delete an Entry



**1**  to enter menu mode.

**2**  or  until



**3**  to select





**4**  or  until




**5**  to select






**6**  or  until

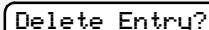


**7**  to select




**8**  or  until you see the entry you want to delete.


**9**  to select the entry,


you see:




**10**  again to confirm the deletion,

you see:

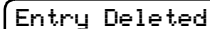

**11**  to return to  
-or-

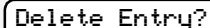

Hold down  to exit menu mode.

## To Edit an Entry

- 1 to enter menu mode.
- 2 or until
- 3 to select
- 4 or until
- 5 to select
- 6 or until
- 7 to select
- 8 or until you see the entry you want to edit.
- 9 to select the entry.

- 10 or until

(to edit the name),

or until

(to edit the phone number),

or until

(to edit the location in the phone list).

- 11 to confirm your selection.

- 12 Use the DTMF microphone keypad to edit the entry (see page 15),

–or–

or until you see the location where you want to store the phone number.

- 13 to store the information.

- 14 to return to

–or–

Hold down to exit menu mode.

## Notes

## VOICE STORAGE

Voice Storage is standard in CDM1550•LS+ radios. Please check with your dealer for compatibility.

The voice storage feature enables your radio to perform seven types of voice related functions:

- Incoming Call Recording
- Voice Memo Recording
- Recorded Message Playback
- Recorded Message Delete
- Recorded Message Transmission
- Automatic Message Reply (“When Available”)
- Message Time Stamping

There is a total of 120 seconds recording time available for all voice storage activity. Your dealer can divide the 120 seconds into a defined number of equal length time slots. The following table summarizes the slot length options available with the CDM1550•LS+ radio:

Number of Equal Length Slots	Slot Length (Seconds)
1	120
2	60
5	24
10	12
20	6

**When recording calls, keep in mind these time slot guidelines:**

- As a time slot becomes close to full, you see a timer count down the final 5 seconds.

When a time slot is completely full, an alert tone sounds

The display shows:

Msg Slot Full

Recording stops.

- When all message slots have at least one message stored, an alert tone sounds.

If a voice storage record function is requested, the display shows:

Memory Full

## INCOMING CALL RECORDING

The CDM1550•LS+ radio allows you to record incoming calls in either of two ways:

- Selective Incoming Call Recording
- All Incoming Call Recording

**Note:** Only the audio transmissions of your caller is recorded.

### Selective Incoming Call Recording

This feature enables you to record incoming calls selectively, or on a call-by-call basis.

#### To Selectively Record an Incoming Call

- 1 Press and hold the preprogrammed **Record/Playback** button (see page 23) while receiving the call.

The display shows

Recording

A confirmation tone sounds, indicating that the radio begins recording.

- 2 The radio records the call until the message slot is full or until you release the preprogrammed **Record/Playback** button.
- 3 Release the **Record/Playback** button to stop recording.

### All Incoming Call Recording




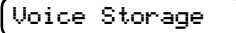

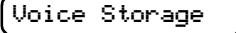











This feature enables you to automatically record all incoming trunked and conventional dispatch calls, trunked and conventional telephone interconnect calls, and MDC selective calls.

This feature is useful when you need to keep informed of channel activity while away from your radio.


**Note:** This feature does not work while in scan mode.




## To Record All Incoming Calls

- 1  to enter menu mode.
- 2  or  until 
- 3  to select 
- 4  or  until 
- 5  to select 
- 6  or  until 
- 7  to select 
- 8 The display continuously flashes, except while a call is being recorded. 

- 9 While your radio is recording, the display shows:

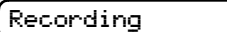


The radio also records the time stamp and the channel alias to the message slot.

- 10 Press  to stop recording.

—or—

Go to step 1 again to continue recording in the next available slot.


**Note:** Five seconds before the message slot ends, the radio display shows

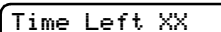

(where XX = remaining seconds).

The “voice storage full” alert sounds when the message slot is full, and recording stops.

The display shows:

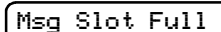

## VOICE MEMO RECORDING

In addition to recording calls received, the CDM1550•LS+ radio offers you the ability to record voice memos (or personal reminders) into the radio. The voice memo recording feature is useful for quickly saving phone numbers, names, or any other brief voice information. You can record voice memos using the preprogrammed **Record/Playback** button (see page 23) or your radio's menu.

### Important Note:

To record properly, incoming calls cannot be received while a voice memo is being recorded.

### To Record a Voice Memo using the Preprogrammed Record/Playback Button




- 1 Press and hold the preprogrammed **Record/Playback** button.
  - The display shows:
 


Recording
  - A confirmation tone sounds, indicating that the radio begins recording.



- 2 Without pressing the **PTT** button, speak clearly into the microphone to record your memo. The radio records your memo until the message slot is full or until you release the preprogrammed **Record/Playback** button.


- 3 Release the **Record/Playback** button to stop recording.



### To Record a Voice Memo using the Menu


- 1  to enter menu mode.
- 2  or  until 

Voice Storage
- 3  to select 


Voice Storage
- 4  or  until 


Record
- 5  to select 


Record
- 6  or  until 

Voice Memo
- 7  to select 

Recording

- 8 Without pressing the **PTT** button, speak clearly into the microphone to record your memo. The radio records your memo until the message slot is full or until you press .

**Note:** To stop recording at any time, press .

- 9 Press  to stop recording.

–or–

Repeat steps 7 and 8 to store additional messages.

## RECORDED MESSAGE PLAYBACK


The CDM1550•LS+ allows you to list, select, and Playback previously recorded incoming call or voice memo messages. You can play back a message by using the preprogrammed **Record/Playback** button (see page 23) or your radio's menu.

**Note:** Recorded message **Playback** cannot be initiated while your radio is receiving. Also, you don't receive any incoming calls while you play back messages.

Playing Msg XXX

## To Playback a Message using the Preprogrammed Record/Playback Button

- 1 Press and release the preprogrammed **Record/Playback** button.


- The first message plays,  and the display shows (XXX = the message number).

- 2 To advance to the next message at any time during Play back, press and release the **Record/Playback** button again.




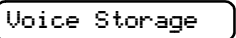






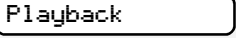




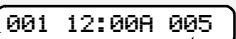
- 3 To exit/cancel Playback mode:


Press and release the preprogrammed **Playback Exit** button (see page 23).



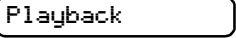


–or–

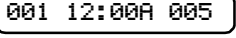Press  to stop Play Back.
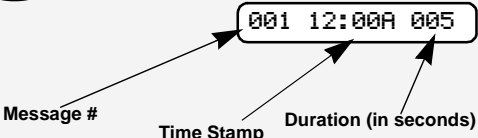
## To Playback a Message using the Menu

- 1  to enter menu mode.
- 2  or  until 
- 3  to select 
- 4  or  until 
- 5  to select 
- 6  or  until 
- 7  to select 






Message #                      Time Stamp                      Duration (in seconds)
- 8  or  to select the desired message.
- 9 Press  to play the selected message.
- 10  or  anytime during playback to advance to the next message.

## RECORDED MESSAGE DELETE




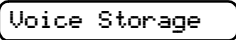













The CDM1550•LS+ radio allows you to delete previously recorded incoming call or voice memo messages. You can delete a message using either the preprogrammed **Delete Playback** button (see page 23) or your radio's menu.

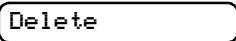**Note:** Messages must be deleted one at a time.

### To Delete a Message using the Preprogrammed Delete Playback Button (see page 23)

- 1 Press and release the preprogrammed **Record/Playback** button.
- 2  or  to select the desired message.
- 3 Press and hold the preprogrammed **Delete Playback** button to delete current message.
- 4  to stop deleting messages.

## To Delete a Message using the Menu

- 1  to enter menu mode.
- 2  or  until 
- 3  to select 
- 4  or  until 
- 5  to select 
- 6  or  to select the desired message.
- 7 Press  to delete the selected message.
- 8  or  to select the another message to be deleted, then go to step 7.  
—or—  
Press  to stop deleting messages.

## RECORDED MESSAGE TRANSMISSION

This feature allows you to transmit a recorded message to another radio user.

### To Transmit a Recorded Message








- 1 Press and hold the **PTT** button to initiate the message transmission.
- 2 While holding down the **PTT** button, press the preprogrammed **Record/Playback** button to select and play back the desired recorded call or memo.
- 3 When finished transmitting your message, press the **Record/Playback** button again to stop transmitting.

## ANSWER MODE









The Answer Mode feature allows radio callers to leave recorded audio messages on your radio.

**Note:** This feature is available via the radio's menu and/or the radio or the DTMF microphone programmable button.








### To Enable the Answer Mode Feature

- 1  to enter menu mode.
- 2  or  until Voice Storage
- 3  to select Voice Storage
- 4  or  until Ans Mode On?
- 5  to select Ans Mode On

### To Record a Message

- 1  or  until Record Msg
  - 2  to select Greeting Msg?
  - 3  or  until Alternate Msg?
  - 4  to select Greeting Msg?  
The display shows: Recording
  - 5 Without pressing the **PTT** button, speak clearly into the microphone to record your memo. The radio records your greeting until the message slot is full or until you press .
  - 6 To exit or cancel recording, press .
- With this feature enabled, the recorded message is automatically transmitted whenever your radio receives a call.

## To Disable the Answer Mode Feature













- 1  to enter menu mode.
- 2  or  until Voice Storage
- 3  to select Voice Storage
- 4  or  until Ans Mode Off?
- 5  to select Ans Mode Off

## Notes



## AUDIO/TONE SETTINGS

You can customize the audio and tone feature settings on your radio by:

- 1  to enter menu mode.
- 2  or  until 
- 3  to select 
- 4  or  until you see the feature you want to change (see the table on the next page).
- 5  to select the feature. You see the feature's current setting.
- 6  or  for available settings. (For Name and Call Tone Tagging, see page 66.)
- 7  to set the desired setting.

## Audio/Tone Settings




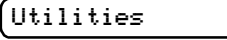








Feature	What it Does	Settings
Alert Vol Lvl	Makes the volume level of the audio and alert tones independent. If turned on, it makes the alert tones follow the settings in the CPS; if turned off, the alert tones follow the setting of the volume knob.	Ind Alert Off Ind Alert On
Tone Disable	Turns all alert and audio tones on or off.	Tones On Tones Off
Name and Call Tone Tagging †§	Assigns a specific ring tone when receiving a call from a specific user (see page 66 for details).	Standard Alert #1 – #7
Call Tone Tag †§	Assigns a specific tone when receiving a specific type of radio call (see page 66 for details).	Standard Alert #1 – #7
Escalert †§	Increases the volume of the alarm tones when a radio call is not answered.	Escalert On Escalert Off
Companding	Provides the same audio quality for 12.5 kHz and for 25 kHz channels.	Compand On Compand Off

† LTR trunking operation only.



§ Conventional operation only.

## UTILITIES

You can customize some of your radio's feature by:

- 1  to enter menu mode.
- 2  or  until 
- 3  to select 
- 4  or  until you see the feature you want to change (see table on the next page).
- 5  to select the feature. You see the feature's current setting.
- 6  or  for available settings.
- 7  to select the desired setting.

## Utilities Features

Feature	What it Does	Settings
Power Level	Changes the power level of the radio to high, low (see page 101).	Power High Power Low
Clock	Sets the time, or turns the clock on or off (see page 102).	Clock On Clock Off Set Time
Reminder Alarm	Sets the alarm, or turns it on or off (see page 102).	Alarm On Alarm Off Set Time
Language Selection § ‡	Selects the language to be shown on your radio's displays.	English Spanish Portuguese French
Software Ver #	<p>In LTR trunked and conventional operation, displays the radio's software version number when you press .</p> <p>In PassPort operation, displays the PassPort software version number when you press .</p> <p><b>Note:</b> The LTR and conventional software version number may be different than the PassPort software version number.</p>	—

§ Conventional Operation only.

‡ LTR Trunked Operation only.

## SETTING THE POWER LEVEL **L**/**H**

Each channel in your radio has a predefined transmit power level that can be changed.

- *High power* (**H**) allows you to reach a radio that is farther away.
- *Low power* (**L**) conserves the battery's charge.


### Notes:

- Be aware that a message received from a nearby radio might change your radio's power level to low. This may cause radios that are farther away not to receive your transmissions.
- In PassPort mode, the power level is predefined radio wide.


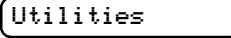
### To set the power level:


Press the preprogrammed **Power Level** button (see page 22) to toggle between *low* and *high*,  
–or–


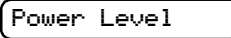
Do the following:

1  to enter menu mode.


2  or  until 

3  to select 

4  or  until 

5  to select 

The display shows the current power level.

6  or  until 

or until 


7  to confirm the selection.

## SETTING THE CLOCK/ALARM

### To Set the Clock/Alarm


1  to enter menu mode.

2  or  until


3  to select



4  or  until

or until

5  to confirm your selection.

6  or  until



7  to select

8 When a setting is blinking, you can change it with  or .


Hour (AM or PM)

Minutes (AM/PM or 24 hr)

**Note:** You cannot select "24 hr" for

9  or  to move to the previous or next setting.

10  to save your changes.

11  to return to

–or– to return to












–or–

–or–

Hold down  to exit menu mode.

## DISPLAYING THE TIME












### To Display the Time

- 1  to enter menu mode.
  - 2  or  until
  - 3  to select
  - 4  or  until
  - 5  to confirm your selection.
  - 6  or  until
  - 7  to select
- The radio displays the time for a preprogrammed duration.
- 8  to exit the menu.

## SELECTING THE DISPLAY LANGUAGE

(LTR TRUNKED AND CONVENTIONAL OPERATION ONLY)

### To Select the Display Language

- 1  to enter menu mode.
- 2  or  until
- 3  to select
- 4  or  until
- 5  to confirm your selection.
- 6  or  until the desired language is displayed.
- 7  to confirm your selection.
- 8  to exit the menu.

## Notes



# WARRANTY

## LIMITED WARRANTY MOTOROLA COMMUNICATION PRODUCTS

### I. WHAT THIS WARRANTY COVERS AND FOR HOW LONG:

MOTOROLA INC. (“MOTOROLA”) warrants the MOTOROLA manufactured Communication Products listed below (“Product”) against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

Mobile Units	Two (2) Years
Product Accessories	One (1) Year

Motorola, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted

for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA.

MOTOROLA assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA. Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance, or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment is expressly excluded from this warranty. Because each system which may use the Product is unique, MOTOROLA disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

## II. GENERAL PROVISIONS:

This warranty sets forth the full extent of MOTOROLA'S responsibilities regarding the Product. Repair, replacement, or refund of the purchase price, at MOTOROLA's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

## III. STATE LAW RIGHTS:

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL

OR CONSEQUENTIAL DAMAGES OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY.

This warranty gives specific legal rights, and there may be other rights which may vary from state to state.

## IV. HOW TO GET WARRANTY SERVICE:

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by Motorola through one of its authorized warranty service locations. If you first contact the company which sold you the Product (e.g., dealer or communication service provider), it can facilitate your obtaining warranty service. You can also call Motorola at 1-800-927-2744 US/Canada.

## V. WHAT THIS WARRANTY DOES NOT COVER:

- A) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- B) Defects or damage from misuse, accident, water, or neglect.
- C) Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
- D) Breakage or damage to antennas unless caused directly by defects in material workmanship.
- E) A Product subjected to unauthorized Product modifications, disassembles or repairs (including, without limitation, the addition to the Product of non-Motorola supplied equipment) which adversely affect performance of the Product or interfere with Motorola's normal warranty inspection and testing of the Product to verify any warranty claim.
- F) Product which has had the serial number removed or made illegible.
- G) Rechargeable batteries if:
  - 1) any of the seals on the battery enclosure of cells are broken or show evidence of tampering.
  - 2) the damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.
- H) Freight costs to the repair depot.
- I) A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA's published specifications or the FCC type acceptance labeling in effect for the Product at the time the Product was initially distributed from MOTOROLA.
- J) Scratches or other cosmetic damage to Product surfaces that does not affect the operation of the Product.
- K) Normal and customary wear and tear.

## VI. PATENT AND SOFTWARE PROVISIONS:

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and MOTOROLA will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- A) that MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;
- B) that MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and
- C) should the Product or parts become, or in MOTOROLA's opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or used in connection with the Product. The foregoing

states the entire liability of MOTOROLA with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software such as the exclusive rights to reproduce in copies and distribute copies of such Motorola software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise of rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

## VII. GOVERNING LAW:

This Warranty is governed by the laws of the State of Illinois, USA.

## ACCESSORIES

Motorola offers a number of accessories to enhance the productivity of your two-way radio. Many of the available accessories are listed below. For a list of Motorola approved accessories, visit the following web site which lists approved accessories:

<http://www.motorola.com/cgiss/index.shtml>

## MICROPHONES

AARMN4025_	Standard Compact Microphone
AARMN4026_	Enhanced DTMF Keypad Microphone
AARMN4038_	Heavy Duty Microphone
AAREX4617_	Telephone Style Handset with Hang-Up Cup
HLN9073_R	Microphone Hang-Up Clip (all microphones)

## HANDSFREE KITS

AARMN4027_	Visor Mounted Microphone
RLN4856_	Footswitch PTT
RLN4857_	Pushbutton PTT
RLN4858_	Gooseneck PTT

## EXCHANGEABLE BUTTON KITS

**Note:** Other individual exchangeable buttons are available through Customer Care and Services (CCS). Please see Basic Service Manual for button numbers.

RLN4831_	Standard Button Kit: MON, SCAN, CALL, HOME, PHONE
RLN5324_	Standard Button Kit: MON, SCAN, CALL, HOME, PHONE, ROAM, SITE

## MOUNTING KITS

GLN7324_R	Standard Low Profile Bracket (VHF/UHF)
GLN7317_	High Profile Mounting Bracket (VHF/UHF)
RLN4779_	Key Lock Mounting Bracket (VHF/UHF)
RLN4781_	Direct in Dashboard Mounting Kit (VHF/UHF)
HLN8097_	Removable Slide Mount Tray Package (VHF/UHF - A maximum of two external accessory wires can be attached to the slide tray)

## REMOTE MOUNTS

RLN4802_	Remote Mount Kit (requires HKN4192 power cable)
RKN4077_	Remote Mount Cable, 3 meter length
RKN4078_	Remote Mount Cable, 5 meter length
RKN4079_	Remote Mount Cable, 7 meter length

## EXTERNAL SPEAKERS

RSN4001_	13 Watt External Loudspeaker
HSN8145_	7.5 Watt External Speaker - for Receiver Audio

## INSTALLATION AND ALARM KITS

HKN4137_	Standard 12V 10" Power Cable to Battery (VHF/UHF)
HKN4192_	12V 20 Ft. Power Cable to Battery (VHF/UHF)
GKN6272_	External Alarm Relay and Cable
RLN4836_	Emergency Footswitch
HKN9327_	Ignition Switch Cable
HKN9557_R	PL259/Mini-U Antenna Adapter - 8" Cable
HLN9457_R	Hardware Kit for use with the Expanded Accessory Connector (includes 16 connector pins, (five) 8" wires with pins attached and an extra housing)

## ANTENNAS

HAD4006A	VHF 136-144 MHz, 1/4 Wave Roof Mount
HAD4007A	VHF 146-150.8 MHz, 1/4 Wave Roof Mount
HAD4008A	VHF 150.8-162 MHz, 1/4 Wave Roof Mount
HAD4009A	VHF 162-174 MHz, 1/4 Wave Roof Mount
HAD4014A	VHF 146-172 MHz, 3.0dB Gain Roof Mount
HAE4002A	UHF 403-430 MHz, 1/4 Wave Roof Mount
HAE4003A	UHF 450-470 MHz, 1/4 Wave Roof Mount
HAE4004A	UHF 470-512 MHz, 3.5dB Gain Roof Mount
HAE4010A	UHF 406-420 MHz, 3.5dB Gain Roof Mount
HAE4011A	UHF 450-470 MHz, 3.5dB Gain Roof Mount
HAE4012A	UHF 470-494 MHz, 1/4 Wave Roof Mount
HAE4013A	UHF 494-512 MHz, 3.5dB Gain Roof Mount
09-02105F01	BNC Connector

RAB4002A	Lowband 29.7-36 MHz, 1/4 Wave Base Loaded
RAB4003A	Lowband 36-42 MHz, 1/4 Wave Base Loaded
RAB4004A	Lowband 42-50 MHz, 1/4 Wave Base Loaded

## SERVICE AIDS AND PROGRAMMING EQUIPMENT

H5177	<p>Portable/Mobile Programming Software (CPS) 3 Year Subscription Package - Includes CPS CD ROM Software: HVN9025 for the HT/EX500/CDM/MTX.LS Series and HVN9067 for MTX Series Privacy Plus. Includes HT/MTX Series Programming/Test Cable (AARKN4074). Also is compatible with RLN4460 used for radio testing. (HVN9025 is compatible with Windows® 95/98/2000/Millennium (ME)/Windows NT®. HVN9067 is compatible with Windows® 95/98/Windows NT®).</p> <p><b>Note:</b> Software requires a license agreement and is not intended for resale.</p>
AARKN4081_	Programming Cable with Internal RIB (direct connection from computer to radio microphone connector)

AARKN4083_	Programming Cable (allows radio programming via rear accessory connector)
3080070N01	Programming Cable (connection from RIB to radio)
3080369B72	9 Pin PC to Radio Interface Box Cable (IBM AT or compatible)
RLN4460_	Test Box for Portables and Mobiles
RLN4008_	Radio Interface Box (RIB)
0180357A57	Wall Mounted Power Supply, 120V - used with RLN4008
RLN4853_	10 to 20 Pin Adapter

## CONTROL STATION KITS

HMN3000_	Desk Microphone (Black)
GLN7326_	Desktop Tray with Speaker
GLN7318_	Desktop Tray without Speaker
HKN9088_	Mobile Mini-U Antenna Adapter - 8 Ft. Cable
HPN4002_R	Power Supply and Cable (1-25 Watt Models)
HPN4001_R	Power Supply and Cable (25-60 Watt Models)

## MOBILE DATA UNITS SECTION

### Terminals:

RDN7367_	Mobile Display Terminal with GPS - Mobile display terminal equipped with an Automatic Vehicle Location (AVL) device compatible with Global Positioning System (GPS).
RDN7368_	Mobile Display Terminal - Mobile messaging device equipped with a data modem. This unit features a 4x40 backlit LCD display and the keypad allows users to send information to the dispatcher in response to base instructions.
RDN7369_	Standalone Modem/GPS - Cost efficient Automatic Vehicle Location (AVL) device compatible with Global Positioning System (GPS).
RDN7738_	Serial Breakout Unit (used in multiple applications that allow up to eight base modems to be connected).

### Radio Interface Cables

One radio interface cable is required with purchase of each hardware device

RDN7370_	3 Ft. Interface Cable with 16 Pin Connector
----------	---

RDN7376_	15 Ft. Interface Cable with 16 Pin Connector
RDN7739_	3 Ft. Flying Cable (same as regular interface cable, but omits connectors).
RDN7740_	15 Ft. Flying Cable (same as regular interface cable, but omits connectors).

### Peripherals

RDN7371_	Credit Card Reader - Card reader is used to perform automatic online credit card authorization transaction. Used with RDN7379 (credit card software).
RDN7373_	Mobile Printer - The mobile printer provides users with a hard copy of the information transmitted from the base dispatch location.

### Global Positioning System (GPS) Antennas

Antenna is required with purchase of any GPS unit.

RDN7372_	Fixed Mount GPS Active Antenna
RDN7375_	Magnetic Mount GPS Active Antenna



## Software

RDN7374_	Programming Software - Used for mobile data units.
RDN7377_	Regional Map Software - Will allow up to 10 selected US counties.
RDN7378_	AVL Messaging Status Software - Mapping software that provides the user with Automatic Vehicle Location to track vehicles along with message dispatch and status tracking capability.
RDN7379_	Credit Card Software - Used with RDN7371 (credit card reader).

## Miscellaneous

RDN7364_	Radio Channel Card - A radio channel controller and modem that interface with the base radio. Required with every radio channel or wireless circuit used within the system.
RDN7380_	Mobile Programming Hardware

## PUBLIC ADDRESS

RLN5288_	Public Address Kit (includes interface cable)
HKN9323_	8 Ft. Public Address Speaker Cable
HKN9324_	15 Ft. Public Address Speaker Cable (one cable per speaker)
HSN1000_R	6 Watt Amplified External Speaker

## RETROFIT KIT

6686119B01	Dismantling Tool
------------	------------------

## Notes